



# 9121D/S Disc Memory Operator's Manual

Hewlett-Packard Greeley Division  
3404 East Harmony Road, Fort Collins, Colorado 80525  
(For Worldwide Sales and Service Offices see back of manual.)  
Copyright by Hewlett-Packard Company, 1982



# Table of Contents

## Chapter 1: General Description

Introduction .....	1
Technical Specifications .....	2

## Chapter 2: Installation

Equipment Supplied .....	5
Unpacking Your HP 9121D/S Disc Memory.....	5
Configuring Power.....	6
Interfacing to Your System.....	7

## Chapter 3: System Operation

Flexible Disc Usage and Handling .....	11
Write Protect Error on Initialization .....	16
Media Monitor .....	16
Controls and Indicators.....	17
Applying Power .....	18
Loading the Flexible Disc .....	18
Flexible Disc Structure .....	19
Basic System Operation .....	19
Data Errors.....	19
Selftest .....	19

## Chapter 4: Maintenance and Service

Maintenance.....	23
Service .....	24
Warranty.....	24
Cleaning the Case .....	24
Sales & Service Listings .....	25



# Chapter 1


## General Description

- Introduction
- Technical Specifications


### Introduction

The HP 9121D/S Disc Memories (Figures 1-1) are random access data storage devices. The HP 9121S contains a single 3 1/2-inch disc drive providing 286.72 Kbytes of storage capacity. The HP 9121D contains two 3 1/2-inch disc drives providing a total storage capacity of 573.44 Kbytes.

The 9121D/S Drives have been designed to emulate the HP 82900 Series Disc Drives. The 82900s are HP's 5 1/4-inch Flexible Disc Drives. Thus, HP computers that support the 82900 Flexible Disc Drives will support the 9121D/S. Refer to the Mass Storage Manual of your computer for programming information for the HP 82900 5 1/4-inch Flexible Disc Drive.

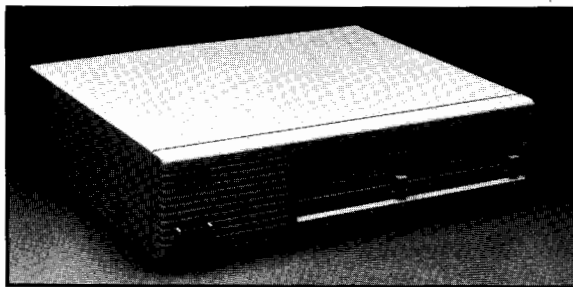

HP 9121D

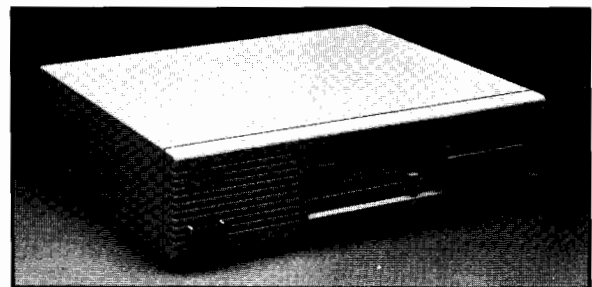

HP 9121S

Figure 1-1. HP 9121D/S Flexible Disc Memories

## Technical Specifications

Listed next are the electrical and physical specifications for the HP 9121D/S disc memories.

	HP 9121S	HP 9121D
Number of drives	1	2
Net Weight	3.6kg (8.5 lbs)	4.5 kg (10 lbs)
Height	76 mm (2.99 in.)	
Depth	285 mm (11.2 in.)	
Width	325 mm (12.8 in.)	

**Interface** HP-IB

### HP Double Density Format

Encoding:	MFM
Rotational Speed:	600 RPM
Bit Density @ 600 RPM:	Track 69 (Inside track) 7610 BPI
Track Density:	135 tracks per inch
Tracks per Surface:	70
Surfaces used per disc:	1

### Capacity

Bytes/Sector:	256
Sectors/Track:	16
Tracks:	70
Bytes/Drive (Formatted):	286.72 Kbytes

---

#### NOTE

All of HP's computers spare 4 complete tracks. This reduces the useable user space to 256\*16\*66 (bytes/sector times sector/track times unspared tracks). This total equals 270.34 Kbytes. Additionally, directories further reduce useable user space. This, as implemented by HP, generally takes track 0. Actual useable space then is somewhere less than 270.34 Kbytes.

---

### Access Time

Track-to-Track Seek:	15 ms/track, plus 20 ms settling
Maximum Track-to-Track Seek (70 tracks):	1070 ms
Average Track-to-Track:	370 ms
Maximum Rotational Latency:	100 ms
Average Rotational Latency:	50 ms
Spindle Motor on time:	1 s
Maximum Data Access Time (Seek plus Latency plus Motor on time):	2.175 s
Average Data Access Time:	420 ms

**Data Transfer Rates:**

<b>Interleave</b>	<b>Burst Rate (1) (bytes/sec)</b>	<b>Avg. Transfer Rate (2) (bytes/sec)</b>
1	3.2K	2.6K
2	76.9K	17.1K
3	40.8K	12.1K
4	20.6K	9.3K
5	14.8K	7.6K
6	11.6K	6.4K
7	9.5K	5.5K
8	7.0K	4.8K
9	6.2K	4.3K
10	5.5K	3.9K
11	5.0K	3.5K
12	4.2K	3.2K
13	3.9K	3.0K
14	3.6K	2.8K
15	3.4K	2.6K

Maximum burst transfer rate of the 9121D/S is 64.5 Kbytes/s for writing and 67 Kbytes/s for reading. This is the capability of the 9121D/S. Your system transfer may vary due to your controller.

- (1) Minimum average burst rate required to utilize this interleave efficiently without introducing extra disc rotational latencies.
- (2) Average data rate for a multiple-track read or write.

**Power Requirements**

86-125 volts or 195-250 volts @ 67 watts RMS (94 voltamps)

50-60 Hertz

Fuse 1A, 250 for 115V setting

.5A 250 for 230V setting

**Environmental Specs****Operating Limits**

Temperature:	10° C to 45° C (50° F to 115° F)
Humidity:	20 to 80% with maximum wet bulb temperature (non-condensing) not to exceed 29° C (85 F).
Altitude:	0 to 4572 m (0 to 15 000 ft)

**Non-operating Limits****(Storage and Transit)**

Temperature:	-40° C to 60° C (-40° F to 140° F)
Altitude:	-304 to 15240 m (-1000 to 50 000 ft)

---

**NOTE**

The flexible disc in the HP 9121D/S Disc Memory is designed for operation in a typical office environment. Use of the equipment in an environment containing dirt, dust, or corrosive substances will cause the flexible disc drives and media life to be drastically reduced.

---

# Chapter 2

## Installation

- Equipment Supplied
- Unpacking Your HP 9121D/S Disc Memory
- Configuring Power
- Interfacing to Your System



### Equipment Supplied

The following equipment is supplied with each HP 9121D/S disc memory.

Table 2-1. Equipment Supplied

Description	Quantity	HP Part Number
Power Cable	1	Dependent on location (see Chapter 2)
* Operator's Manual	1	09121-90000
Fuse	1 96 to 125VAC 1.0 Amp or 1 195 to 250VAC .5 Amp Dependent on Location	2110-0001 2110-0012

\*This manual is available in the following languages:

German – 09121-90006 Spanish – 09121-90008  
French – 09121-90007 Italian – 09121-90009

A package of ten discs has been set up as a product. This product is orderable using the 92191A product number.

### Unpacking Your HP 9121D/S Disc Memory

Your disc memory was carefully inspected before shipment. Remove the unit from the shipping carton and carefully inspect the unit for any physical damage that may have occurred during shipment. If you find any damage, you should immediately notify your dealer and file a claim with any carriers involved.

---

#### CAUTION

THE DISC MEMORY IS A PRECISION INSTRUMENT. MECHANICAL SHOCK CAN MISALIGN THE READ/WRITE HEAD, RESULTING IN READ ERRORS AND/OR DAMAGED DISCS WHETHER THE DISC IS OPERATING OR NOT.

---

If the disc memory is moved, be careful when picking it up and setting it down.

Carefully repack the disc memory in a shipping carton before transporting it to another site.

---

**NOTE**

Evidence of excessive shock will void the warranty.

---

Please check to insure that you have received all of the standard equipment. If any items are incorrect or missing, please contact the dealer from whom you purchased the unit.

## Configuring Power

### Setting the Line Voltage Select Switch

The voltage select switch on the rear panel must be set to the nominal line voltage for the area in which it is operating, Figure 2-1 shows the setting for the voltage select switch for the various line voltages.

---

**CAUTION**

ALWAYS TURN THE AC POWER SWITCH OFF OR DISCONNECT THE AC LINE CORD BEFORE CHANGING THE LINE VOLTAGE SELECT SWITCH POSITION. CHANGING THE LINE VOLTAGE SELECT SWITCH SETTING WHILE AC POWER IS ON COULD DAMAGE THE DISC MEMORY.

---

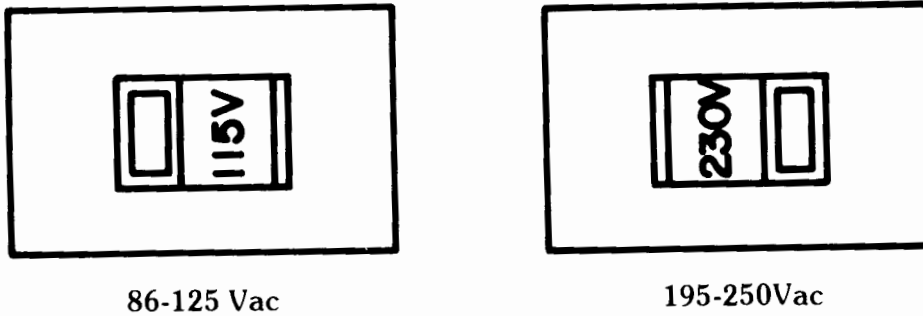


Figure 2-1. Line Voltage Select Switch

### Fuses

A different fuse is required for each of the two voltage ranges of 86-125 and 195-250 VAC. Table 2-2 gives the correct fuse ratings and part numbers.

Table 2-2. Fuses

	Voltage Range	Fuse Rating	HP P/N
HP 9121D/S	86-125VAC	1.A 250 VAC-Normal Blow	2110-0001
HP 9121D/S	195-250VAC	.5A 250 VAC-Normal Blow	2110-0012

---

**WARNING**


ALWAYS DISCONNECT THE DISC MEMORY FROM ANY AC LINE BEFORE CHANGING FUSES.

---

## Power Cords

Power cords supplied by HP have polarities matched to the power input socket on the equipment (Figure 2-2).

- L = Line or active conductor (also called “live” or “hot”)
- N = Neutral or identified conductor
- E = Earth or safety ground

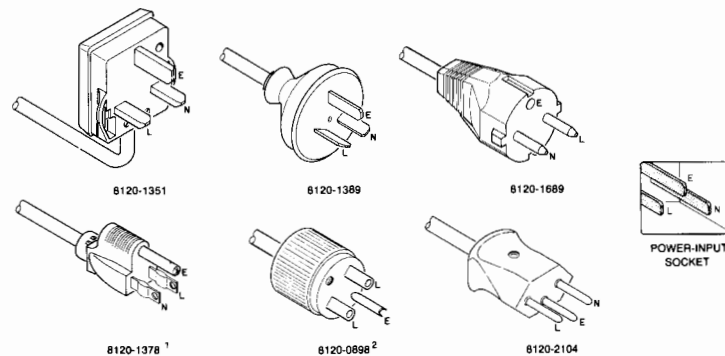

<sup>1</sup>UL and CSA approved for use in the United States of America and Canada with equipment set for either 100 or 120 Vac operation.

<sup>2</sup>UL and CSA approved for use in the United States of America and Canada with equipment set for either 200 or 240 Vac operation.

Figure 2-2. Available Power Cords

### WARNING

IF IT IS NECESSARY TO REPLACE THE POWER CORD, THE REPLACEMENT CORD MUST HAVE THE SAME POLARITY AS THE ORIGINAL AS WELL AS THE EARTH OR SAFETY GROUND CONDUCTOR. OTHERWISE, A SAFETY HAZARD MIGHT EXIST IF AN INTERNAL FAILURE OCCURS.

The cord packaged with the equipment depends upon where the equipment is to be delivered.

## Interfacing to Your System

### The HP-IB Interface

The HP 9121D/S are connected to the computer via the Hewlett-Packard Interface Bus (HP-IB). Refer to the figure below for a list of the HP-IB interface cables used with HP computers.

<u>Length</u>	<u>Accessory Number</u>
1 metre	10833A
2 metres	10833B
4 metres	10833C
.5 metres	10833D

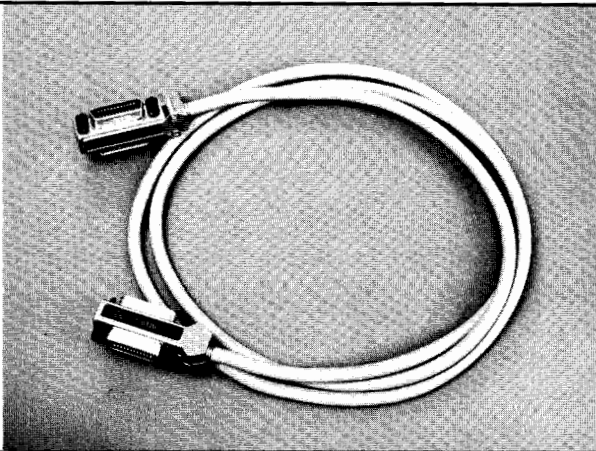


Figure 2-3. HP-IB Interface Cables

#### HP-IB Interface Restrictions:

1. All the AC line switches must be turned "OFF" when connecting (and disconnecting) devices to your system.
2. The total length of cable permitted in one bus system must be less than or equal to two metres times the number of devices connected together (the interface card is counted as one device).
3. The total length of the cable must not exceed 20 metres. For example, a system containing six devices can be connected together with cables that have a total length less than or equal to 12 metres (six devices x 2m/device = 12 metres). The individual lengths of cable may be distributed in any manner desired as long as the total length does not exceed the allowed maximum. If more than 10 devices are to be connected together, cables shorter than two metres must be used between some of the devices to keep the total cable length less than 20 metres.
4. The maximum number of devices that can be connected together in one bus system is 15.

There are no restrictions to the way cables may be connected together; however, it is recommended that no more than four piggyback connectors be stacked together on one device. The resulting structure could exert enough force on the connector mounting to damage it.

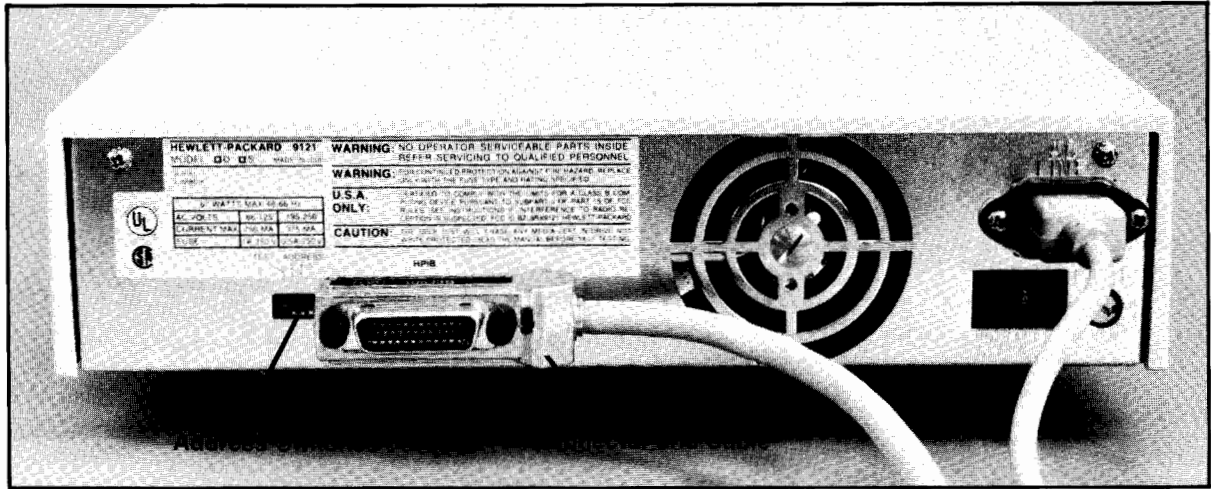


Figure 2-4. Interface Connection

### Selecting the Device Address

Each device in an HP-IB system must be set to a unique device address. The 9121D contains two separate drives, but is one device and requires one address. See the mass storage information of your controller for addressing information concerning drive 0 and drive 1. See Figure 2-5 for switch locations.

Prior to setting the device address switches, turn the disc memory AC line switches OFF.

The switches can be set to any one of eight device addresses, ranging from decimal 0 through 7. Refer to Figure 2-5 to set these switches to the desired device address.

Address	Switch Segments			
	2	1	0	
0	**	DOWN	DOWN	DOWN
1	**	DOWN	DOWN	UP
2	**	DOWN	UP	DOWN
3	**	DOWN	UP	UP
4	**	UP	DOWN	DOWN
5	**	UP	DOWN	UP
6	**	UP	UP	DOWN
7	**	UP	UP	UP

\*\* = Selftest - Refer to Chapter 3 for selftest information.

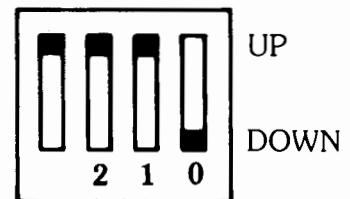


Figure 2-5 . Device Address Switch Setting



# Chapter 3

## System Operation

- Flexible Disc Usage and Handling
- Media Monitor
- Controls and Indicators
- Applying Power
- Loading the Flexible Disc
- Flexible Disc Structure
- Basic System Operation
- Data Errors
- Selftest
- Helpful Hints

### Flexible Disc Usage and Handling

#### Flexible Disc Media

The removable storage medium used in the HP 9121D/S is a flexible mylar disc coated with a thin layer of magnetic oxide. The disc is enclosed in a protective plastic jacket with a slot for head access to the recording surface. Only the lower side of the flexible disc is used for data storage. The lower side refers to the lower side of the disc as the disc resides in the drive.

Each disc may contain 286 Kbytes of formatted data. Since some storage is used for a directory, the exact amount available for user storage depends upon the controller and the number of files stored. Refer to the appropriate computer mass storage programming or reference manual for details.

Each flexible disc must be initialized before it can be used for data storage. The initialization procedure marks each disc sector, checks for defective tracks, and establishes file directories.

Refer to the mainframe programming or reference manual for the correct initialization procedure.

#### Write Protect Error on Initialization

A motor speed check is performed when a disc is inserted to be initialized. If the motor speed is on either side of the tolerance allowed, a Write Protect Error is generated and the disc is not initialized. If your drive is operating properly, this indication is one of a defective disc. Discard the disc.

---

**CAUTION**

DISC DRIVE PERFORMANCE AND RELIABILITY ARE DEPENDENT ON THE TYPE OF MEDIA USED. DISC DRIVE SPECIFICATIONS CAN BE ASSURED ONLY WHEN USING HP MEDIA. THE USE OF IMPROPER MEDIA CAN RESULT IN PREMATURE DISC FAILURE OR DAMAGE TO THE DISC DRIVE.


ON SOME DISC PRODUCTS, HP MAY QUALIFY OTHER NON-HP MEDIA. WHEN TESTED, THIS MEDIA MET HP SPECIFICATIONS. HOWEVER, HP DOES NOT WARRANT OR SUPPORT THIS MEDIA AND CANNOT CONTROL CHANGES IN ITS SPECIFICATIONS OR QUALITY. THE SELECTION AND USE OF SUCH PRODUCTS IS THE CUSTOMER'S RESPONSIBILITY. HP RESERVED THE RIGHT TO EXCLUDE FROM WARRANTY AND MAINTENANCE AGREEMENT COVERAGE ANY REPAIRS WHICH HP REASONABLY DETERMINES OR BELIEVES WERE CAUSED BY THE USE OF MEDIA NOT PROVIDED BY HP. HP WILL UPON REQUEST PROVIDE SUCH REPAIRS ON A TIME AND MATERIAL BASIS.

WARRANTY AND MAINTENANCE AGREEMENT COVERAGE OF REPAIRS NOT CAUSED BY THE USE OF NON-HP MEDIA IS UNAFFECTED.

---

## Operating Cleanliness

The critical elements involved in the read/write process are shown in Figure 3-1. The read/write head must maintain contact with the disc during read and write operations. Also shown are various types of contaminants and their size relationships. A contaminant particle hard enough and of the right size may scratch the media oxide coating or the head surface. Even if not hard enough to scratch, it may be large enough to lift the head from the surface, causing data errors or damage to the media.

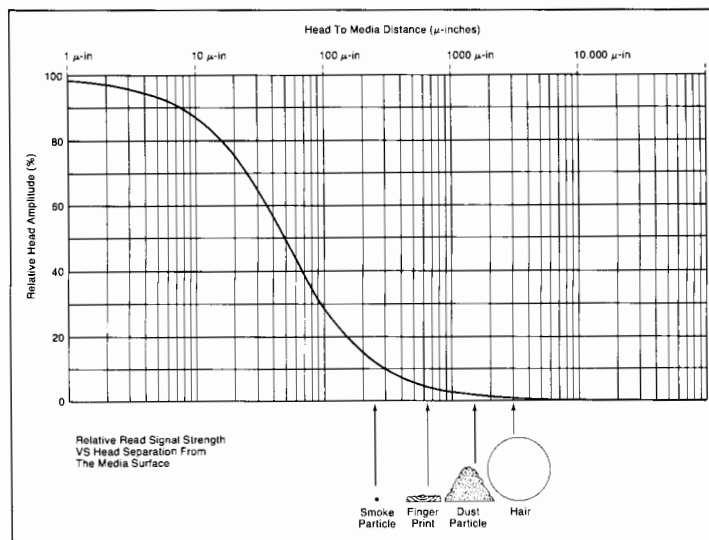

**Figure 3-1. Head/Media Critical Requirements**

## Handling Flexible Disc Media

The flexible disc is basically maintenance free, but it is delicate and **MUST BE HANDLED CAREFULLY**. Remember, the disc contains your valuable data and programs, and should be treated accordingly. A good rule of thumb is to treat your disc as you would a valuable record album. Here are some specific Do's and Don'ts to avoid loss of data or damage to your discs.


**EVEN A LITTLE CARELESSNESS IN DISC HANDLING CAN DRAMATICALLY REDUCE THE LIFE OF THE DISC.**

### Do's

#### Back Up Discs Frequently

There is always a chance of losing data when mass storage devices are accessed. There are many causes in any computer system - a programming bug, operator error, power failure, or hardware failure. In the case of flexible discs, additional conditions must be considered - media failure from contamination or wearout. **ONE SURE PROTECTION AGAINST DATA LOSS IS FREQUENT BACKUP OF YOUR FILES.**

#### Slide the Disc Guard Over The Head Window When Not In Use

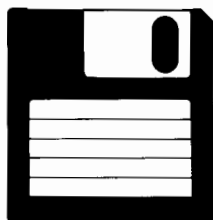


This is the single most important thing to remember about handling your disc because it prolongs disc life by protecting it from dust, finger prints, and scratches. **NEVER ATTEMPT TO BLOW DUST FROM THE DISC.** Between uses discs should be stored upright in a dust free container. The box in which the discs are shipped in, or a similar container, is a good choice.

#### Operate Your System In A Clean Environment



Airborne contaminants and particles accidentally dropped onto the disc will cause your disc to wear out prematurely and may cause unreliable data storage and retrieval operations. Some of the most common contaminants are **DUST, SMOKE, ASHES, ERASER CRUMBS, and BREADCRUMBS.** **NEVER ATTEMPT TO BLOW SMALL PARTICLES FROM THE DISC.** Chemical vapors may also cause premature wearout.

#### Maintain Proper Temperature And Humidity

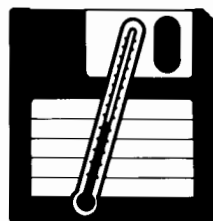

The proper operating range is 10° C (45° F) to 45° C (115° F) and 20% to 80% relative humidity. While temperature is usually easy to control, it may be necessary to make special provisions to keep the humidity in the proper range. Although the disc will continue to operate outside the normal humidity range, it will wear out more quickly and will have a higher error rate.

### Avoid Magnetic Fields



The data is stored on the disc magnetically, and can be erased by an external magnetic field. Avoid placing a disc near power transformers, magnets, large disc memories or motors.

### Remove Disc From Drive When Not In Use



Remove the disc completely from the drive when access is not needed for an extended period of time.

### Use A Felt Tip Pen To Label Your Disc



Use a soft felt tip pen to label your disc, and be careful to write only in the label area.

### Replace Discs Frequently

Although discs are designed to provide many hours of useful life, they will eventually wear out. The life of a disc is VERY dependent on how carefully it is handled and how much it is used.

The following guidelines refer to head/media contact time or the time the front panel LED is on. The terms used here (normally and heavily) also refer to load pad replacement in the maintenance section. A disc used normally (less than 20 minutes a day) should last half a year. A disc that is used heavily (more than 2 hours a day) should not be expected to last more than 2 months. Discs should be replaced whenever they begin to show signs of circular marring. See the following section titled "Media Wear Indication".

**Don't****Do Not Touch The Surface Of The Disc**

The thickness of a fingerprint is enough to lift the head off the disc and cause errors. The oils in a fingerprint will also collect dust which can cause a disc to wear out sooner than it normally would.

**Do Not Bend Or Fold The Disc**


The disc is flexible but will not operate if it is creased. Using ball point pens, rubber bands, paper clips, etc. can crease the disc.

**Do Not Try To Clean A Disc**

The inside surface of the disc jacket is covered with a special material that cleans the disc as it rotates. Any other method of cleaning may cause solvent damage to the media or scratch the disc, causing loss of data. If a disc becomes dirty or scratched, immediately transfer the data to a new disc and dispose of the old disc.

**Disc Description and Write Protect**

The micro-flexible disc is enclosed in a rigid plastic shell for extra protection and reduced disc-to-case friction (see Figure 3-2). A metal centering hub ensures rapid and accurate positioning when the disc is inserted in the drive. The disc guard which slides back and forth across the front of the disc protects the recording surface from foreign object contamination.

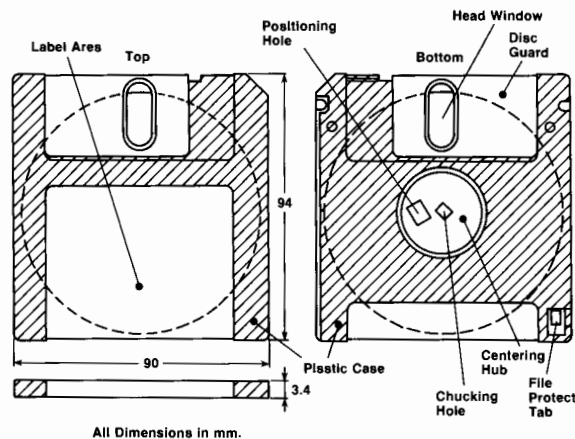

**Figure 3-2. The Micro-Flexible Disc**

The micro-flexible disc is write unprotected when you receive it. To prepare the disc for write protected operation do the following (see Figure 3-3):

1. Weaken or score the attach point so as not to break the tab
2. Break off the write protect tab
3. Align the protrusion on the tab with the groove in the disc
4. Depress the tab into the groove – tab should fit snugly

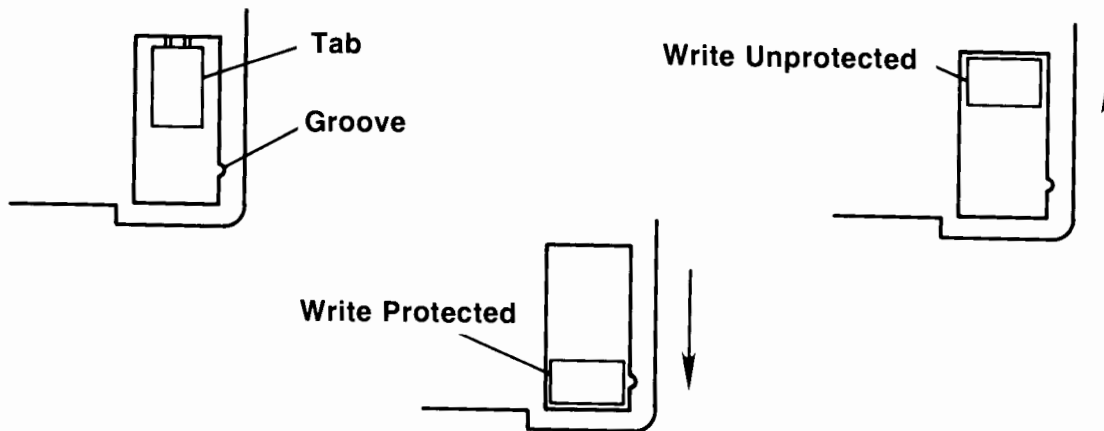


Figure 3-3. Disc Write Protect Tab

Write protection is accomplished by sliding the tab away from the center of the disc.

## Write Protect Error on Initialization

A motor speed check is performed when a disc is inserted to be initialized. If the motor speed is on either side of the tolerance allowed, a Write Protect Error is generated and the disc is not initialized. If your drive is operating properly, this indication is one of a defective disc. Discard the disc.

## Media Monitor

As the flexible disc becomes worn, the friction between the disc and the read/write head increases. Because the same read/write head accesses the data from all your discs, it is very important that this friction be kept to a minimum level. To insure the long wear life of the read/write head, you should make the following media check each time you insert a disc into your drive.

Checking for disc wear is a simple visual inspection of the disc surface before you insert the disc into the drive. When viewing the disc surface you should look for any signs of circular marring. This is done by sliding open the disc guard revealing the disc surface. If you see any sign of circular marring on either side of the exposed surface, the disc should be immediately copied and discarded. Circular marring generally occurs first on the upper (label side) surface of the disc.

A good disc should always reflect a hatchmark type of pattern. Compare a new (never used) disc to a disc you have used for a few hours. There should be no visible difference.

An internal test has been implemented to provide you with an upper limit indication for disc use. When a disc reaches a finite limit, the head loaded indicator (front panel LED) blinks on and off. This indication is continued until you remove the disc or until the host sends a command to the drive. The drive accepts and performs the command from the host after which it resumes the disc “worn out” indication. When you get the “worn out” indication, copy your disc and discard the original.

Viewing the disc in the previously described manner prior to inserting the it into the drive and taking the appropriate action when you receive the “worn out” indication will insure the long life of the read/write head.



## Controls and Indicators

The indicators are located on the front panel. The indicators, as shown in Figure 3-4, are the following: one disc access light for each drive unit, (the disc access lights are illuminated whenever the disc is accessed for data storage or retrieval and momentarily when the drive is powered up) one power ON/OFF switch, and the selftest LED (seen through the air inlet).

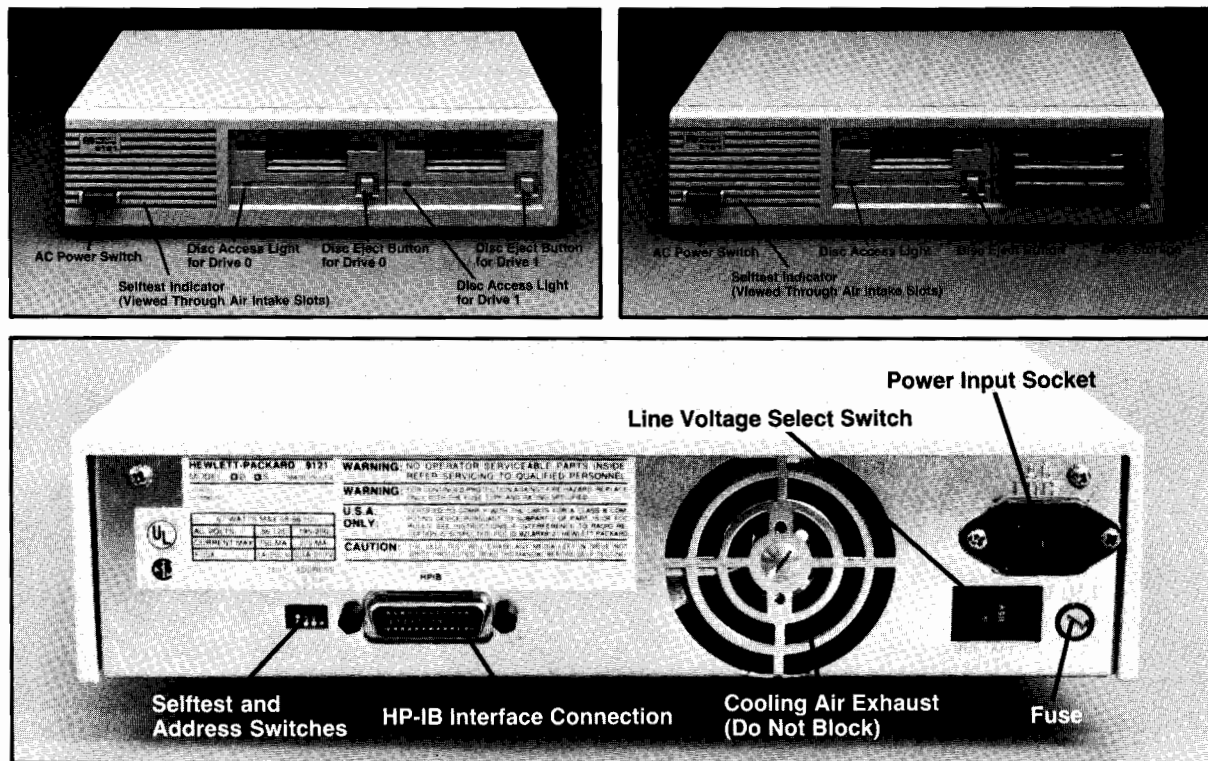


Figure 3-4. Front and Rear Panels

### CAUTION

THE ACTIVITY LIGHT ON THE FRONT OF EACH DRIVE INDICATES USAGE OF THAT DRIVE. DO NOT DEPRESS THE DISC EJECT BUTTON WHEN THE ACTIVITY LIGHT IS ON.

## Applying Power

Before turning the disc memory on, be sure to perform all the procedures in Chapter 2.

Locate the AC line switch on the front panel and set it to the "ON" or "1" position. The disc drive requires about 10 seconds after the application of power before it is ready for operation or before you insert your disc. See the section titled "Selftest" for the power-on selftest indication.

## Loading the Flexible Disc

To install and remove flexible discs, perform these steps.

1. Do not attempt to insert the disc into the drive without power applied.
2. Slide the disc guard away from the head window exposing the disc surface. Insert the exposed head window first with the metal centering hub down. Carefully slide the disc into the drive until you feel it contact the rear of the drive. Do not force the disc.
3. Remove the disc by depressing the disc eject button and pulling the disc straight out. Always slide the disc guard over the head window immediately after removing the disc from the drive.

Refer to Figure 3-5 for proper loading of the flexible disc.

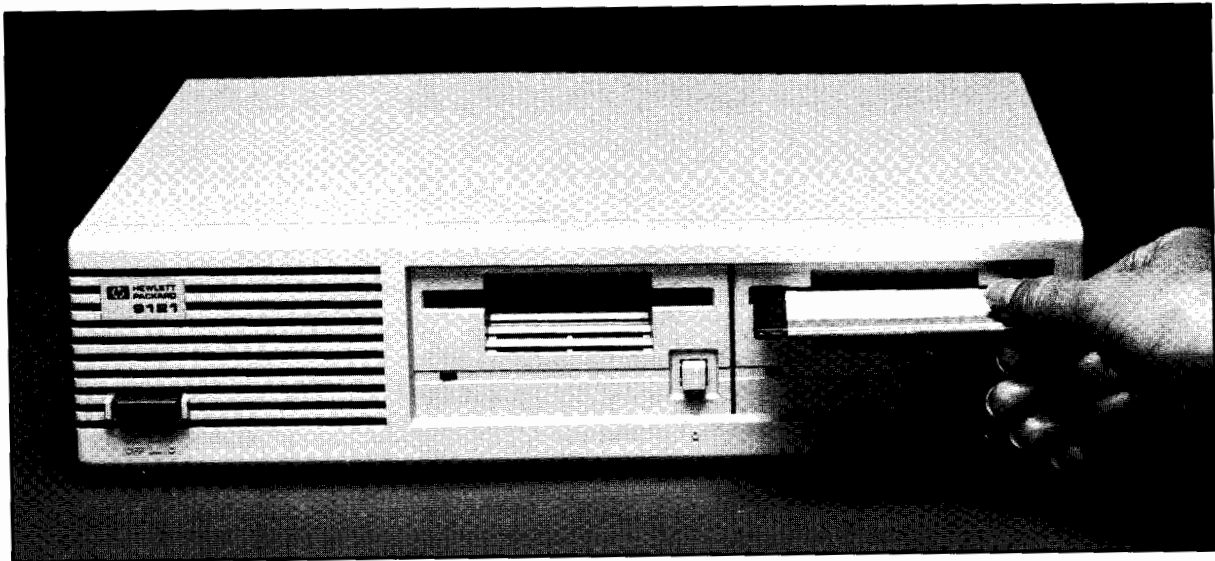


Figure 3-5. Disc Loading

## Flexible Disc Structure

The surface of the flexible disc is coated with ferromagnetic iron oxide. Data is stored in the form of binary digits represented by magnetic flux reversals on the disc. Information is stored and retrieved by the disc unit's read/write head which comes in contact with the disc's lower surface.

Information is stored in 70 concentric tracks on the lower side of the disc. The tracks are numbered 0 through 69. Each track is divided into 16 physical records (sectors), numbered 0 through 15. Each record contains 256 bytes (characters) of information. There is an important difference between a physical record and a logical record. A physical record is the smallest accessible unit of data on the disc. It is always the same size (256 bytes). A logical record is one that you define when you create a data file. Data files are variable and depend on the type and quantity of data you are storing.

Some of the space on each disc is reserved for the directory. The space reserved depends on the controlling computer and the number of records in the file directory.

## Basic System Operation

Before using a blank flexible disc, it must be formatted or initialized for use with your computer. This process checks the disc for defects (areas where information cannot be stored), reserves spare tracks, and creates a file directory. The directory holds the name and location of each file on the disc. When a disc is first initialized, the directory is empty, so no files are listed when you catalog the disc.

The 9121D/S drive emulates the 82901 drive. Thus, you program it using mass storage ROM or driver statements that your computer manuals describe for the 82901 disc drive.

## Data Errors

Two error conditions cause the selftest LED to come on and stay on until the condition disappears. These conditions are a command sequence-error over the HP-IB (from the host controller) and a data error from the disc. Whenever these conditions occur it is best to retry the last operation. If a retry is successful, the error and error indication are cleared. If the condition remains after several retries contact your dealer or sales office for assistance.

## Selftest

There are four selftest modes on the 9121D/S: power-on, user confidence, remote, and service. The service selftests are not included in this document.

The user confidence test LED is visible through the air intake slots in the front of the 9121D/S. See Figure 3-1 for the location of this LED.

The power-on selftest is a subset of the user confidence selftest. The power-on test exercises the RAM, and the flexible disc controller chip (FDC). Power-on also calculates a checksum for the ROM. If the RAM or ROM tests fail, the processor goes no farther, waiting for service. If the 9121D/S passes the RAM and ROM tests, but fails the FDC test, the 9121D/S's processor continues to initialize the system and allows the host to talk to it, if possible. If all the power-on selftests are passed, the confidence test LED flashes five times to indicate a successful power-on condition.

---

**NOTE**

Disconnect the HP-IB cable before initiating the user confidence selftest.

---

The user confidence selftest is initiated by toggling the selftest switch on the back panel from up to down to up. **DO NOT LEAVE THIS SWITCH IN THE DOWN POSITION.** If each drive contains discs that are not write protected, a complete selftest is performed: a RAM, ROM, HP-IB, FDC, seek, motor speed, format, and read verify test is executed. The RAM test reads and writes checkerboard patterns into the RAM. The ROM test calculates a checksum for the ROM and compares that to a precalculated value. The HP-IB test reads and writes to selected registers on the HP-IB chip and then sets the chip up to talk to itself and echo data back to the processor. No testing of the interface to the host occurs. The FDC test reads and writes to selected registers on the chip. The seek test steps the head to track 69 and then back to track 0, testing for movement on each drive. The motor speed test measures the index period and compares it to the drive specification. The format test formats the discs in each drive.

---

**WARNING**

ALWAYS USE A BLANK INITIALIZED DISC OR A DISC CONTAINING UNWANTED DATA WHEN PERFORMING THE USER CONFIDENCE SELFTEST. THIS TEST READS AND WRITES DATA ONTO THE DISC AS PART OF THE SELFTEST. ALL DATA PREVIOUSLY STORED ON THE DISCS USED DURING THE USER CONFIDENCE TEST IS DESTROYED AND IS UNRECOVERABLE.

---

The read test verifies the written data and the error checking of this data on the discs. If all these tests are passed successfully, the user confidence test LED flashes ten times. If any test fails, no flashing occurs.

If the disc inserted in drive 0 is write protected, the format test is skipped. If all the other tests are passed successfully, the user confidence test LED flashes ten times. If no disc is inserted in drive 0, then the seek, motor speed, format, and read tests are skipped. If the other tests are passed the confidence test LED flashes ten times.

After this user confidence test, the drives are reset and the 9121D/S appears, to the host, to have just been powered on.

The remote selftest is initiated by the host with the proper HP-IB command. It is basically the same as the full user confidence test without the HP-IB test. Results of the test are available over the HP-IB to the host. See the INITIATE SELFTEST command description in the Service Manual for more details.

## Helpful Hints

The following information may help you avoid possible problems when operating the 9121D/S with Series 80, 100, and 200 mainframes. Refer to your mass storage programming or reference manual for more information on the use of the disc memory with your mainframe.

### Series 80 –

Do not place the HP 86's CRT on top of early versions of the 9121D/S (Serial Numbers below 2229A03802 for the 9121D and 2244A00341 for the 9121S). It is possible to erase data from the discs if operated in this manner. A new top cover, containing an additional shield, is available through your Sales and Service Office. Specify HP part number 09121-88865. This cover allows you to operate the 9121D/S with the CRT on top of the disc drive.

When initializing a disc ALWAYS specify the volume label or use the Mass Storage Unit Specifier to direct the location of the Initialize command. If you fail to specify the volume label, the next section of the command which is the location (Mass Storage Unit Specifier) is interrupted as the volume label. The problem arises that the location is left undefined. With the location undefined, the Series 80 defaults to the previous location specified using the Mass Storage Unit Specifier command. If a previous location has not been specified an error condition results.

### Series 100 –

In the event that the error "CANNOT IDENTIFY ADDRESS 0" should appear on your Series 100 display, press the "LOAD OPS SYS" softkey (F6) to clear the error. This error will most likely occur on the power-up cycle of the system.

### Series 200 – (With Basic 2.0 Extensions)

When entering the MSUS (Mass Storage Unit Specifier) on your Series 200 mainframe, specify HP 9121 rather than HP 82901 for optimum performance of the 3 1/2-inch flexible disc. When the MSUS is entered, the interleave is automatically set to 4 for the HP 82901, set to 2 for the HP 9121.

Basic Operating Systems (without 2.0 Extensions) previously supplied with the 9826 and 9836 mainframes, when used with the Series 200 mainframe, may not allow you to access the 3 1/2-inch flexible disc drive using the HP 9121 MSUS. The MSUS "HP 82901" will have to be used in these instances. Specifying an interleave of 3 may improve the 9121's performance in some circumstances.



# Chapter 4

## Maintenance and Service

- **Maintenance**
- **Service**
- **Warranty**
- **Cleaning the Case**

### Maintenance

The HP 9121D/S Disc Drives do not require regular maintenance. However, the load pad will wear out over a period of time and must be replaced. This is a complicated process and should only be attempted by a trained service person. The maintenance schedule for the load pad depends upon the use of the drive. A normally used drive requires head load pad replacement of every 5 years; whereas, a heavily used drive requires the replacement every 1 to 2 years. Refer to the section titled "Replace Discs Frequently" for determining your drive usage.

The performance and life of the flexible disc heads and the flexible disc media depend directly on how carefully they are handled.

There are several other areas of caution; they are as follows:

---

#### CAUTION

ALWAYS SET THE AC LINE SWITCHES TO "OFF" (0) FOR THE COMPUTER AND THE DISC DRIVES WHEN INSERTING OR REMOVING THE INTERFACE CABLES. USE ONLY CABLES DESIGNED BY HEWLETT-PACKARD SPECIFICALLY FOR THE HP 9121D/S DISC DRIVES. FAILURE TO DO SO COULD DAMAGE THE DISC DRIVE, OR THE CONTROLLING COMPUTER.

---

---

#### CAUTION

KEEP THE FRONT AND BACK OF THE DISC DRIVE FREE FROM OBSTRUCTIONS TO AVOID RESTRICTING THE AIR FLOW. FAILURE TO DO SO COULD CAUSE THE UNIT TO OVERHEAT AND RESULT IN DAMAGE TO THE UNIT.

---

## Service

There are no operator serviceable parts within your HP 9121D/S. If at any time you suspect that your disc memory is malfunctioning, call the HP sales office or dealer from which you purchased your disc memory.

## Warranty

The complete warranty statement for the U.S. and Canada is included inside the front cover of this manual. For other countries, contact your local HP Sales Office or dealer from which you purchased your disc memory to determine warranty terms.

If you have questions concerning the warranty, please contact an authorized dealer or the HP sales and service office (see the list in the back of this manual for the nearest office) where you purchased your disc drive.

## Cleaning the Case

The disc memory case consists of a pearl grey plastic material and is not painted. The rear panel has been painted with a durable, long lasting, non-toxic paint. This design will preserve the appearance of your disc memory for many years. When you want to clean the case, following the next instructions will sustain the quality finish. If the case finish should become damaged, consult your local Hewlett-Packard sales and service office for touchup paints that are available.




---

### CAUTION

CHEMICAL SPRAY-ON CLEANERS USED FOR APPLIANCES AND OTHER HOUSEHOLD AND INDUSTRIAL APPLICATIONS MAY DAMAGE THE CASE FINISH. THESE OR OTHER CHEMICAL CLEANERS SHOULD NOT BE USED.

---



Before cleaning the disc memory case, disconnect the power cord and any interconnecting cables. Dampen a clean, soft, lint-free cloth in a solution of clean water and mild soap. Wipe the soiled areas of the case, ensuring that no cleaning solution gets inside the unit. For cleaning more heavily soiled areas, a 50%-50% solution of clean water and isopropyl alcohol may be used. Wipe the case areas that had cleaning solution applied with a clean, soft, lint free cloth dampened in clean water, then dry the case with a dry, soft, clean cloth. A non-abrasive eraser may be used to remove pen and pencil marks.

---

### CAUTION

DO NOT USE DETERGENTS THAT CONTAIN AMMONIA, BENZENES, CHLORIDES, OR ABRASIVES.

---



## Arranged alphabetically by country

### Product Line Sales/Support Key

#### Key Product Line

- A** Analytical
- CM** Components
- C** Computer Systems Sales only
- CH** Computer Systems Hardware Sales & Services
- CS** Computer Systems Software Sales & Services
- E** Electronic Instruments & Measurement Systems
- M** Medical Products
- MP** Medical Products Primary SRO
- MS** Medical Products Secondary SRO
- P** Personal Computing Products
- \* Sales only for specific product line
- \*\* Support only for specific product line



**IMPORTANT:** These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

*HP distributors are printed in italics.*

### ANGOLA

*Telectra*  
*Empresa Técnica de Equipamentos*  
*Eléctricos, S.A.R.L.*  
*R. Barbosa Rodrigues, 41-1 DT.*  
*Caixa Postal 6487*  
**LUANDA**  
*Tel: 355 15, 355 16*  
*E.M.P*

### ARGENTINA

Hewlett-Packard Argentina S.A.  
Avenida Santa Fe 2035  
Martínez 1640 **BUENOS AIRES**  
Tel: 798-5735, 792-1293  
Telex: 122443 AR CIGY  
Cable: HEWPACKARG  
A,E,CH,CS,P

*Biotron S.A.C.I.y.M*  
*Av Paseo Colon 221, 9 Piso*  
*1399 BUENOS AIRES*  
*Tel: 30-4846, 30-1851, 30-8384*  
*Telex: 17595 BIONAIR*  
**M**

*Fate S.A. I.C.I./Electronica*  
*Venezuela 1326*  
*1095 BUENOS AIRES*  
*Tel: 379026, 379027*  
*Telex: 18137, 22754 ALVAR AR*  
**P**

### AUSTRALIA

#### Adelaide, South Australia Office

Hewlett-Packard Australia Pty.Ltd.  
153 Greenhill Road  
**PARKSIDE, S.A. 5063**  
Tel: 272-5911  
Telex: 82536  
Cable: HEWPARDA Adelaide  
A\*,CH,CM,E,MS,P

#### Brisbane, Queensland Office

Hewlett-Packard Australia Pty.Ltd.  
5th Floor  
Teachers Union Building  
495-499 Boundary Street  
**SPRING HILL, Queensland 4000**  
Tel: 229-1544  
Telex: 42133  
Cable: HEWPARDB Brisbane  
A,CH,CM,E,MS,P

#### Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Pty.Ltd.  
121 Wollongong Street  
**FYSHWICK, A.C.T. 2609**  
Tel: 80 4244 Telex: 62650  
Cable: HEWPARDC Canberra  
A\*CH,CM,E,MS,P

### Melbourne, Victoria Office

Hewlett-Packard Australia Pty.Ltd.  
31-41 Joseph Street  
**BLACKBURN, Victoria 3130**  
Tel: 89-6351  
Telex: 31-024  
Cable: HEWPARDM Melbourne  
A,CH,CM,CS,E,MS,P

### Perth, Western Australia Office

Hewlett-Packard Australia Pty.Ltd.  
141 Stirling Highway  
**NEDLANDS, W.A. 6009**  
(effective 28 Sept. 1981:  
261 Stirling Highway  
**CLAREMONT, W.A. 6010**)  
Tel: 386-5455  
Telex: 93859  
Cable: HEWPARDP Perth  
A,CH,CM,E,MS,P

### Sydney, New South Wales Office

Hewlett-Packard Australia Pty.Ltd.  
17-23 Talavera Road  
P.O. Box 308  
**NORTH RYDE, N.S.W. 2113**  
Tel: 887-1611  
Telex: 21561  
Cable: HEWPARDS Sydney  
A,CH,CM,CS,E,MS,P

### AUSTRIA

Hewlett-Packard Ges.m.b.h.  
Grottenhofstrasse 94  
Verkaufsburo Graz  
A-8052 **GRAZ**  
Tel: 21-5-66  
Telex: 32375  
CH,CM,E\*

Hewlett-Packard Ges.m.b.h.  
Wehlstrasse 29  
P.O. Box 7  
A-1205 **VIENNA**  
Tel: (222) 35-16-210  
Telex: 135823/135066  
A,CH,CM,CS,E,MS,P

### BAHRAIN

*Green Salon*  
*P.O. Box 557*  
**BAHRAIN**  
*Tel: 25503-250950*  
*Telex: 84419*  
**P**

*Wael Pharmacy*  
*P.O. Box 648*  
**BAHRAIN**  
*Tel: 256123*  
*Telex: 8550 WAEL GJ*  
**M**

### BELGIUM

Hewlett-Packard Belgium S.A./N.V.  
Blvd de la Woluwe, 100  
Woluwedal  
B-1200 **BRUSSELS**  
Tel: (02) 762-32-00  
Telex: 23-494 paloben bru  
A,CH,CM,CS,E,MP,P

### BRAZIL

Hewlett-Packard do Brasil I.e.C.  
Ltda.  
Alameda Rio Negro, 750  
**ALPHAVILLE 06400 Barueri SP**  
Tel: 421-1311  
Telex: 011 33872  
Cable: HEWPACK Sao Paulo  
A,CH,CM,CS,E,MS  
Hewlett-Packard do Brasil I.e.C.  
Ltda.  
Avenida Epitacio Pessoa, 4664  
22471 **RIO DE JANEIRO-RJ**  
Tel: 286-0237  
Telex: 021-21905 HPBR-BR  
Cable: HEWPACK Rio de Janeiro  
A,CH,CM,E,MS,P\*

### CANADA

**Alberta**  
Hewlett-Packard (Canada) Ltd.  
210, 7220 Fisher Street S.E.  
**CALGARY, Alberta T2H 2H8**  
Tel: (403) 253-2713  
A,CH,CM,E\*,MS,P\*

Hewlett-Packard (Canada) Ltd.  
11620A-168th Street  
**EDMONTON, Alberta T5M 3T9**  
Tel: (403) 452-3670  
A,CH,CM,CS,E,MS,P\*

**British Columbia**  
Hewlett-Packard (Canada) Ltd.  
10691 Shellbridge Way  
**RICHMOND, British Columbia V6X 2W7**  
Tel: (604) 270-2277  
Telex: 610-922-5059  
A,CH,CM,CS,E\*,MS,P\*

**Manitoba**  
Hewlett-Packard (Canada) Ltd.  
380-550 Century Street  
**WINNIPEG, Manitoba R3H 0Y1**  
Tel: (204) 786-6701  
A,CH,CM,E,MS,P\*

**New Brunswick**  
Hewlett-Packard (Canada) Ltd.  
190 Wilbur Street  
**MONCTON, New Brunswick E2B 2V0**  
Tel: (506) 386-1677  
Telex: 01931470  
CH\*\*

**Nova Scotia**  
Hewlett-Packard (Canada) Ltd.  
P.O. Box 931  
900 Windmill Road  
**DARTMOUTH, Nova Scotia B2Y 3Z6**  
Tel: (902) 469-7820  
Telex: 01931470  
CH,CM,CS,E\*,MS,P\*

**Ontario**  
Hewlett-Packard (Canada) Ltd.  
552 Newbold Street  
**LONDON, Ontario N6E 2S5**  
Tel: (519) 686-9181  
Telex: 610-352-1201  
A,CH,CM,E\*,MS,P\*

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
**MISSISSAUGA, Ontario L4V 1M8**  
Tel: (416) 678-9430  
Telex: 610-492-4246  
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.  
2670 Queensview Dr.  
**OTTAWA, Ontario K2B 8K1**  
Tel: (613) 820-6483  
Telex: 610-563-1636  
A,CH,CM,CS,E\*,MS,P\*

### Quebec

Hewlett-Packard (Canada) Ltd.  
17500 South Service Road  
Trans-Canada Highway  
**KIRKLAND, Quebec H9J 2M5**  
Tel: (514) 697-4232  
Telex: 05821521  
A,CH,CM,CS,E,MP,P\*

Hewlett-Packard (Canada) Ltd.  
Les Galeries du Vallon  
2323 Boulevard du Versant Nord  
**STE. FOY, Quebec G1N 4C2**  
Tel: (418) 687-4570  
CH

### CHILE

*Jorge Calcagni y Cia. Ltda.*  
*Arturo Burhle 065*  
*Casilla 16475*  
**SANTIAGO 9**  
*Tel: 222-0222*  
*Telex: Public Booth 0001*  
*A,CM,E,M*  
*Olympia (Chile) Ltd.*  
*Rodrico de Araya 1045*  
*Casilla 256-V*  
**SANTIAGO 21**  
*Tel: 225-5044*  
*Telex: 40565 OLYMP CL*  
**C,P**

### CHINA, People's Republic of

*CEIEC Inc.*  
*44 Beiwei Rd.*  
**BEIJING, China**  
*Telex: 22475 CEIEC CN*  
*A,CH,CM,CS,E,P*

### COLOMBIA

*Instrumentación*  
*H. A. Langebaek & Kier S.A.*  
*Apartado Aéreo 6287*  
**BOGOTÁ 1, D.E.**  
*Carrera 7 No. 48-75*  
**BOGOTÁ, 2 D.E.**  
*Tel: 287-8877*  
*Telex: 44400*  
*Cable: AARIS Bogota*  
*A,CM,E,M,P*

### COSTA RICA

*Cientifica Costarricense S.A.*  
*Avenida 2, Calle 5*  
*San Pedro de Montes de Oca*  
*Apartado 10159*  
**SAN JOSE**  
*Tel: 24-38-20, 24-08-19*  
*Telex: 2367 GALGUR*  
*CM,E,M*

### CYPRUS

*Telexra Ltd.*  
*P.O. Box 4809*  
*14C Stassinou Avenue*  
**NICOSIA**  
*Tel: 62698*  
*Telex: 2894 Leviodoy*  
*E,M,P*

### CZECHOSLOVAKIA

*Hewlett-Packard*  
*Obchodni Zastupitelstvi v CSSR*  
*Post. schranka 27*  
*CS-118 01 PRAHA 011*  
*Tel: 66-296*  
*Telex: 121353 IHC*

### DENMARK

Hewlett-Packard A/S  
Dalavej 52  
**DK-3460 BIRKEROD**  
Tel: (02) 81-66-40  
Telex: 37409 hpas dk  
A,CH,CM,CS,E,MS,P  
Hewlett-Packard A/S  
Navervej 1  
**DK-8600 SILKEBORG**  
Tel: (06) 82-71-66  
Telex: 37409 hpas dk  
CH,CM,E

### ECUADOR

*CYDEE Cia. Ltda.*  
*Avenida Eloy Alfaro 1749*  
*Casilla 6423 CCI*  
**QUITO**  
*Tel: 450-975, 243-052*  
*Telex: 2548 CYDEE ED*  
*A,CM,E,P*  
*Hospitalar S.A.*  
*Robles 625*  
*Casilla 3590*  
**QUITO**  
*Tel: 545-250, 545-122*  
*Telex: 2485 HOSPITAL ED*  
*Cable: HOSPITALAR-Quito*  
**M**

### EGYPT

*International Engineering Associates*  
*24 Hussein Hegazi Street*  
*Kasr-el-Aini*  
**CAIRO**  
*Tel: 23-829*  
*Telex: 93830*  
*CH,CS,E,M*

*Informatic For Systems*  
*22 Talaat Harb Street*  
**CAIRO**  
*Tel: 759006*  
*Telex: 93938 FRANK UN*  
*CH,CS,P*

*Egyptian International Office*  
*for Foreign Trade*  
*P.O.Box 2558*  
**CAIRO**  
*Tel: 984935*  
*Telex: 93337 EGPOR*  
**P**

### EL SALVADOR

*IPESA de El Salvador S.A.*  
*Boulevard de los Heroes 1148*  
**SAN SALVADOR**  
*Tel: 252787, 259621*  
*Telex: Public Booth 20107*  
*A,CH,CM,CS,E,P*

### FINLAND

Hewlett-Packard Oy  
Revontulentie 7  
SF-02100 **ESPOO 10**  
Tel: (90) 455-0211  
Telex: 121563 hewpa sf  
A,CH,CM,CS,E,MS,P

**FRANCE**

Hewlett-Packard France  
Le Ligoureux  
Bureau de Vente de Aix-en-Provence  
Place Romée de Villeneuve  
F-13090 AIX-EN-PROVENCE  
Tel: (42) 59-41-02  
Telex: 4 10770F  
A,CH,CM,E,MS,P\*

Hewlett-Packard France  
Boite Postale No. 503  
F-25026 BESANCON  
28 Rue de la Republique  
F-25000 BESANCON  
Tel: (81) 83-16-22  
CH,M

Hewlett-Packard France  
Bureau de Vente de Lyon  
Chemin des Mouilles  
Boite Postale No. 162  
F-69130 ECULLY Cédex  
Tel: (78) 33-81-25  
Telex: 3 10617F  
A,CH,CM,CS,E,MP

Hewlett-Packard France  
Immeuble France Evry  
Tour Lorraine  
Boulevard de France  
F-91035 EVRY Cédex  
Tel: (60) 77-96-60  
Telex: 692315F  
CM,E

Hewlett-Packard France  
5th Avenue Raymond Chanas  
F-38320 EYBENS  
Tel: (76) 25-81-41  
Telex: 980124 HP GRENOB EYBE  
CH,CM

Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
Boite Postale 300  
F-93153 LE BLANC MESNIL  
Tel: (01) 865-44-52  
Telex: 211032F  
CH,CM,CS,E,MS

Hewlett-Packard France  
Le Montesquieu  
Avenue du President JF Kennedy  
F-33700 MERIGNAC  
Tel: (56) 34-00-84  
Telex: 550105F  
CH,CM,E,MS

Hewlett-Packard France  
32 Rue Lothaire  
F-57000 METZ  
Tel: (87) 65-53-50  
CH,CM

Hewlett-Packard France  
3 Rue Julien Videment  
F-44200 NANTES  
Tel: (40) 48-09-44  
CH\*\*

Hewlett-Packard France  
Zone Industrielle de Courtaboeuf  
Avenue des Tropiques F-91947 Les  
Ulis Cédex ORSAY  
Tel: (1) 907-78-25  
Telex: 600048F  
A,CH,CM,CS,E,MP,P

Hewlett-Packard France  
Paris Porte-Maillot 13, 15 25  
Boulevard De L'Amiral Bruix  
F-75782 PARIS Cédex 16  
Tel: (01) 502-12-20  
Telex: 613663F  
CH,CM,MS,P

Hewlett-Packard France  
2 Allée de la Bourgonette  
F-35100 RENNES  
Tel: (99) 51-42-44  
Telex: 740912F  
CH,CM,E,MS,P\*

Hewlett-Packard France  
98 Avenue de Bretagne  
F-76100 ROUEN  
Tel: (35) 63-57-66 CH\*\* ,CS

Hewlett-Packard France  
4 Rue Thomas Mann  
Boite Postale 56  
F-67200 STRASBOURG  
Tel: (88) 28-56-46  
Telex: 890141F  
CH,CM,E,MS,P\*

Hewlett-Packard France  
20 Chemin de la Cépière  
F-31081 TOULOUSE Cédex  
Tel: (61) 40-11-12  
Telex: 531639F  
A,CH,CM,CS,E,P\*

Hewlett-Packard France  
Bureau de Vente de Lille  
Immeuble Péricentre  
Rue Van Gogh  
F-59650 VILLENEUVE D'ASQ  
Tel: (20) 91-41-25  
Telex: 160124F  
CH,CM,E,MS,P\*

**GERMAN FEDERAL REPUBLIC**

Hewlett-Packard GmbH  
Technisches Büro Berlin  
Keithstrasse 2-4  
D-1000 BERLIN 30  
Tel: (030) 24-90-86  
Telex: 018 3405 hpbld  
A,CH,CM,E,M,P,X

Hewlett-Packard GmbH  
Technisches Büro Böblingen  
Herrenberger Strasse 110  
D-7030 BÖBLINGEN  
Tel: (07031) 667-1  
Telex: 07265739 bbn or 07265743  
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH  
Technisches Büro Dusseldorf  
Emanuel-Leutze-Strasse 1  
D-4000 DUSSELDORF  
Tel: (0211) 5971-1  
Telex: 085/86 533 hpdd  
A,CH,CM,CS,E,MS,P

Hewlett-Packard GmbH  
Vertriebszentrale Frankfurt  
Berners Strasse 117  
Postfach 560 140  
D-6000 FRANKFURT 56  
Tel: (0611) 50-04-1  
Telex: 04 13249 hpffm  
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH  
Technisches Büro Hamburg  
Kapstadttring 5  
D-2000 HAMBURG 60  
Tel: (040) 63804-1  
Telex: 21 63 032 hphd  
A,CH,CM,CS,E,MS,P

Hewlett-Packard GmbH  
Technisches Büro Hannover  
Am Grossmarkt 6  
D-3000 HANNOVER 91  
Tel: (0511) 46-60-01  
Telex: 092 3259  
A,CH,CM,E,MS,P

Hewlett-Packard GmbH  
Technisches Büro Mannheim  
Rosslauer Weg 2-4  
D-6800 MANNHEIM  
Tel: (621) 70050  
Telex: 0462105  
A,C,E

Hewlett-Packard GmbH  
Technisches Büro Neu Ulm  
Messerschmittstrasse 7  
D-7910 NEU ULM  
Tel: 0731-70241  
Telex: 712816 HP ULM-D  
A,C,E\*

Hewlett-Packard GmbH  
Technisches Büro Nürnberg  
Neumeyerstrasse 90  
D-8500 NÜRNBERG  
Tel: (0911) 56-30-83  
Telex: 0623 860  
CH,CM,E,MS,P

Hewlett-Packard GmbH  
Technisches Büro München  
Eschenstrasse 5  
D-8021 TAUFKIRCHEN  
Tel: (089) 6117-1  
Telex: 0524985  
A,CH,CM,E,MS,P

**GREAT BRITAIN**

Hewlett-Packard Ltd.  
Trafalgar House  
Navigation Road  
ALTRINCHAM  
Cheshire WA14 1NU  
Tel: (061) 928-6422  
Telex: 668068  
A,CH,CS,E,M

Hewlett-Packard Ltd.  
Oakfield House, Oakfield Grove  
Clifton  
BRISTOL BS8 2BN  
Tel: 36806  
Telex: 444302  
CH,CM,M,P

Hewlett-Packard Ltd.  
14 Wesley Street  
CASTLEFORD  
Yorkshire WF10 1AE  
Tel: (0977) 550016  
Telex: 5557355  
CH

Hewlett-Packard Ltd.  
Fourier House  
257-263 High Street  
LONDON COLNEY  
Herts., AL2 1HA  
Tel: (0727) 24400  
Telex: 1-8952716  
CH,CS,E

Hewlett-Packard Ltd  
Tradax House, St. Mary's Walk  
MAIDENHEAD  
Berkshire, SL6 1ST  
Tel: (0628) 39151  
CH,CS,E,P

Hewlett-Packard Ltd.  
308/314 Kings Road  
READING, Berkshire  
Tel: 61022  
Telex: 84-80-68  
CM,P

Hewlett-Packard Ltd.  
Quadrangle  
106-118 Station Road  
REDHILL, Surrey  
Tel: (0737) 68655  
Telex: 947234 CH,CS,E

Hewlett-Packard Ltd.  
Westminster House  
190 Stratford Road  
SHIRLEY, Soihull  
West Midlands B90 3BJ  
Tel: (021) 7458800  
Telex: 339105  
CH

Hewlett-Packard Ltd.  
King Street Lane  
WINNERSH, Wokingham  
Berkshire RG11 5AR  
Tel: (0734) 784774  
Telex: 847178  
A,CS,E,M

**GREECE**

Kostas Karayannis S.A.  
8 Omirou Street  
ATHENS 133  
Tel: 32-30-303, 32-37-371  
Telex: 21 59 62 RKAR GR  
A,CH,CM,CS,E,M,P  
PLAISIO S.A.  
G. Gerardos  
24 Stournara Street  
ATHENS  
Tel: 36-11-160  
Telex: 21 9492  
P

**GUATEMALA**

IPESA  
Avenida Reforma 3-48  
GUATEMALA 9  
Tel: 316627, 314786  
Telex: 4192 TELETRU GU  
A,CH,CM,CS,E,M,P

**HONG KONG**

Hewlett-Packard Hong Kong, Ltd.  
G.P.O. Box 795  
5th Floor, Sun Hung Kai Centre  
30 Harbour Road  
HONG KONG  
Tel: 5-8323211  
Telex: 66678 HEWPA HX  
Cable: HP ASIA LTD Hong Kong  
E,CH,CS,P

Schmidt & Co. (Hong Kong) Ltd.  
Wing On Centre, 28th Floor  
Connaught Road, C.  
HONG KONG  
Tel: 5-455644  
Telex: 74766 SCHMX HX  
A,M

**ICELAND**

Elding Trading Company Inc.  
Hafnarnavoli-Tryggvagolu  
P.O. Box 895  
IS-REYKJAVIK  
Tel: 1-58-20, 1-63-03  
M

**INDIA**

Blue Star Ltd.  
11 Magarath Road  
BANGALORE 560 025  
Tel: 55668  
Telex: 0845-430  
Cable: BLUESTAR  
A,CH,CM,CS,E

Blue Star Ltd.  
Band Box House  
Prabhadevi  
BOMBAY 400 025  
Tel: 422-3101  
Telex: 011-3751  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
Sahas  
414/2 Vir Savarkar Marg  
Prabhadevi  
BOMBAY 400 025  
Tel: 422-6155  
Telex: 011-4093  
Cable: FROSTBLUE  
A,CH,CM,CS,E,M

Blue Star Ltd.  
Kalyan, 19 Vishwas Colony  
Alkapuri, BORDA, 390 005  
Tel: 65235  
Cable: BLUE STAR  
A

Blue Star Ltd.  
7 Hare Street  
CALCUTTA 700 001  
Tel: 12-01-31  
Telex: 021-7655  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
133 Kodambakkam High Road  
MADRAS 600 034  
Tel: 82057  
Telex: 041-379  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
Bhandari House, 7th/8th Floors  
91 Nehru Place  
NEW DELHI 110 024  
Tel: 682547  
Telex: 031-2463  
Cable: BLUESTAR  
A,CH,CM,CS,E,M

Blue Star Ltd.  
15/16C Wellesley Rd.  
PUNE 411 011  
Tel: 22775  
Cable: BLUE STAR  
A

Blue Star Ltd.  
1-1-117/1 Sarojini Devi Road  
SECUNDERABAD 500 033  
Tel: 70126  
Telex: 0155-459  
Cable: BLUEFROST  
A,E

Blue Star Ltd.  
T.C. 7/603 Poornima  
Marulhankuzhi  
TRIVANDRUM 695 013  
Tel: 65799  
Telex: 0884-259  
Cable: BLUESTAR  
E

**INDONESIA**

BERCA Indonesia P. T.  
P.O.Box 496/JKT.  
Jl. Abdul Muis 62  
JAKARTA  
Tel: 373009  
Telex: 46748 BERSAL IA  
Cable: BERSAL JAKARTA  
P

BERCA Indonesia P. T.  
Wisma Antara Bldg., 17th floor  
JAKARTA  
A,CS,E,M

BERCA Indonesia P. T.  
P. O. Box 174/SBY.  
Jl. Kulei No. 11  
SURABAYA  
Tel: 68172  
Telex: 31146 BERSAL SB  
Cable: BERSAL-SURABAYA  
A\*,E,M,P

**IRAQ**

Hewlett-Packard Trading S.A.  
Mansoor City 9B/3/7  
**BAGHDAD**  
Tel: 55 1-49-73  
Telex: 2455 HEPAIRAQ IK  
CH,CS

**IRELAND**

Hewlett-Packard Ireland Ltd.  
Kestrel House  
Clanwilliam Court  
Lower Mount Street  
**DUBLIN 2, Eire**  
Tel: 680424, 680426  
Telex: 30439  
A,CH,CM,CS,E,M,P  
*Cardiac Services Ltd.*  
*Kilmore Road*  
*Artane*  
**DUBLIN 5, Eire**  
Tel: (01) 351820  
Telex: 30439  
M

**ISRAEL**

*Electronics Engineering Division*  
*Motorola Israel Ltd.*  
*16 Kremenski Street*  
*P.O. Box 25016*  
**TEL-AVIV 67999**  
Tel: 3-338973  
Telex: 33569 Motil IL  
Cable: *BASTEL Tel-Aviv*  
A,CH,CM,CS,E,M,P

**ITALY**

Hewlett-Packard Italiana S.p.A.  
Traversa 99C  
Giulio Petrone, 19  
I-70124 **BARI**  
Tel: (080) 41-07-44  
M  
Hewlett-Packard Italiana S.p.A.  
Via Martin Luther King, 38/111  
I-40132 **BOLOGNA**  
Tel: (051) 402394  
Telex: 511630  
CH,CM,E,MS  
Hewlett-Packard Italiana S.p.A.  
Via Principe Nicola 43G/C  
I-95126 **CATANIA**  
Tel: (095) 37-10-87  
Telex: 970291 C,P  
Hewlett-Packard Italiana S.p.A.  
Via G. Di Vittorio 9  
I-20063 **CERNUSCO SUL NAVLIGLIO**  
Tel: (2) 903691  
Telex: 334632  
A,CH,CM,CS,E,MP,P  
Hewlett-Packard Italiana S.p.A.  
Via Nuova san Rocco A  
Capodimonte, 62/A  
I-80131 **NAPOLI**  
Tel: (081) 7413544  
A,CH,CM,E  
Hewlett-Packard Italiana S.p.A.  
Viale G. Modugno 33  
I-16156 **GENOVA PEGLI**  
Tel: (010) 68-37-07 E,C  
Hewlett-Packard Italiana S.p.A.  
Via Turazza 14  
I-35100 **PADOVA**  
Tel: (49) 664888  
Telex: 430315  
A,CH,CM,E,MS  
Hewlett-Packard Italiana S.p.A.  
Viale C. Pavese 340  
I-00144 **ROMA**  
Tel: (06) 54831  
Telex: 610514  
A,CH,CM,CS,E,MS,P\*

Hewlett-Packard Italiana S.p.A.  
Corso Giovanni Lanza 94  
I-10133 **TORINO**  
Tel: (011) 682245, 659308  
Telex: 221079  
CH,CM,E

**JAPAN**

Yokogawa-Hewlett-Packard Ltd.  
Inoue Building  
1-1348-3, Asahi-cho  
**ATSUGI, Kanagawa 243**  
Tel: (0462) 24-0451  
CM,C\*,E  
Yokogawa-Hewlett-Packard Ltd.  
Sannomiya-Daichi Seimei-Bldg. 5F  
69 Kyo-machi Chuo-ku  
**KOBE 650**  
Tel: (078) 392-4791  
C,E  
Yokogawa-Hewlett-Packard Ltd.  
Kumagaya Asahi Yasoji Bldg 4F  
3-4 Chome Tsukuba  
**KUMAGAYA, Saitama 360**  
Tel: (0485) 24-6563  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Mito Mitsui Building  
1-4-73, San-no-maru  
**MITO, Ibaragi 310**  
Tel: (0292) 25-7470  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Sumitomo Seimei Nagoya Bldg.  
11-2 Shimo-sasajima-cho  
Nakamura-ku  
**NAGOYA, Aichi 450**  
Tel: (052) 571-5171  
CH,CM,CS,E,MS  
Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg., 4th Floor  
5-4-20 Nishinakajima, 5-chome  
Yodogawa-ku  
**OSAKA, 532**  
Tel: (06) 304-6021  
Telex: YHPOSA 523-3624  
A,CH,CM,CS,E,MP,P\*

Yokogawa-Hewlett-Packard Ltd.  
3-29-21 Takaido-Higashi 3-chome  
Suginami-ku  
**TOKYO 168**  
Tel: (03) 331-6111  
Telex: 232-2024 YHPTOK  
A,CH,CM,CS,E,MP,P\*

Yokogawa-Hewlett-Packard Ltd.  
3-30-4 Tsuruya-cho  
Kanagawa-ku,  
**YOKOHAMA Kanagawa, 221**  
Tel: (045) 312-1252  
CH,CM,E

**JORDAN**

*Mouasher Cousins Company*  
*P.O. Box 1387*  
**AMMAN**  
Tel: 24907, 39907  
Telex: 21456 SABCO JO  
CH,E,M,P

**KENYA**

*ADCOM Ltd., Inc.*  
*Cily House, Wabera Street*  
*P.O. Box 30635*  
**NAIROBI**  
Tel: 331955  
Telex: 22639  
E,M

**KOREA**

*Samsung Electronics*  
*Industrial Products Div.*  
*76-561 Yeoksam-Dong*  
*Kangnam-Ku*  
*C.P.O. Box 2775*  
**SEOUL**  
Tel: 555-7555, 555-5447  
Telex: K27364 SAMSAN  
A,CH,CM,CS,E,M,P

**KUWAIT**

*Al-Khalidya Trading & Contracting*  
*P.O. Box 830 Safat*  
**KUWAIT**  
Tel: 42-4910, 41-1726  
Telex: 2481 Areeg k1  
CH,E,M  
*Photo & Cine Equipment*  
*P.O. Box 270 Safat*  
**KUWAIT**  
Tel: 42-2846, 42-3801  
Telex: 2247 Matin  
P

**LEBANON**

*G.M. Dolmadjian*  
*Achralieh*  
*P.O. Box 165.167*  
**BEIRUT**  
Tel: 290293  
MP

**LUXEMBOURG**

Hewlett-Packard Belgium S.A./N.V.  
Blvd de la Woluwe, 100  
Woluwedai  
B-1200 **BRUSSELS**  
Tel: (02) 762-32-00  
Telex: 23-494 paloben bru  
A,CH,CM,CS,E,MP,P

**MALAYSIA**

Hewlett-Packard Sales (Malaysia)  
Sdn. Bhd.  
Suite 2.21/2.22  
Bangunan Angkasa Raya  
Jalan Ampang  
**KUALA LUMPUR**  
Tel: 483544  
Telex: MA31011  
A,CH,E,M,P\*  
*Protel Engineering*  
*Lot 319, Salok Road*  
*P.O. Box 1917*  
*Kuching, SARAWAK*  
Tel: 53544  
Telex: MA 70904 PROMAL  
Cable: PROTELENG  
A,E,M

**MALTA**

*Phiip Toledo Ltd.*  
*Natabile Rd.*  
**MRIEHEL**  
Tel: 447 47, 455 66  
Telex: MW.649  
P

**MEXICO**

Hewlett-Packard Mexicana, S.A. de  
C.V.  
Avenida Periferico Sur No. 6501  
Tepepan, Xochimilco  
**MEXICO CITY 23, D.F.**  
Tel: (905) 676-4600  
Telex: 017-74-507  
A,CH,CS,E,MS,P  
Hewlett-Packard Mexicana, S.A. de  
C.V.  
Rio Volga 600  
Colonia del Valle  
**MONTERREY, N.L.**  
Tel: 78-42-93, 78-42-40, 78-42-41  
Telex: 038-410  
CH

**MOROCCO**

*Dolbeau*  
*81 rue Karatchi*  
**CASABLANCA**  
Tel: 3041-82, 3068-38  
Telex: 23051, 22822  
E  
*Gerep*  
*2 rue d'Agadir*  
*Boite Postale 156*  
**CASABLANCA**  
Tel: 272093, 272095  
Telex: 23 739  
P

**NETHERLANDS**

Hewlett-Packard Nederland B.V.  
Van Heuven Goedhartlaan 121  
NL 1181KK **AMSTELVEEN**  
P.O. Box 667  
NL 1080 AR **AMSTELVEEN**  
Tel: (20) 47-20-21  
Telex: 13 216  
A,CH,CM,CS,E,MP,P  
Hewlett-Packard Nederland B.V.  
Bongerd 2  
NL 2906VK **CAPELLE, A/D IJssel**  
P.O. Box 41  
NL 2900 AA **CAPELLE, IJssel**  
Tel: (10) 51-64-44  
Telex: 21261 HEPAC NL  
A,CH,CM,CS  
Koning en Hartman Electrotechniek  
B.V.  
Koperwerf 30  
2544 En den Haag  
The **NETHERLANDS**  
Tel: 070-210101  
Telex: 31528  
CM

**NEW ZEALAND**

Hewlett-Packard (N.Z.) Ltd.  
169 Manukau Road  
P.O. Box 26-189  
Epsom, **AUCKLAND**  
Tel: 687-159  
Cable: HEWPACK Auckland  
CH,CM,E,P\*  
Hewlett-Packard (N.Z.) Ltd.  
4-12 Cruickshank Street  
Kilbirnie, **WELLINGTON 3**  
P.O. Box 9443  
Courtenay Place, WELLINGTON  
Tel: 877-199  
Cable: HEWPACK Wellington  
CH,CM,E,P  
*Northrop Instruments & Systems*  
*Ltd.*  
*369 Khyber Pass Road*  
*P.O. Box 8602*  
**AUCKLAND**  
Tel: 794-091  
Telex: 60605  
A,M

*Northrop Instruments & Systems*  
*Ltd.*

*110 Mandeville St.*  
*P.O. Box 8388*  
**CHRISTCHURCH**  
Tel: 486-928  
Telex: 4203  
A,M

*Northrop Instruments & Systems*  
*Ltd.*

*Sturdee House*  
*85-87 Ghuznee Street*  
*P.O. Box 2406*  
**WELLINGTON**  
Tel: 850-091  
Telex: NZ 3380  
A,M

**NORTHERN IRELAND**

*Cardiac Services Company*  
*95A Finaghy Road South*  
**BELFAST BT 10 OBY**  
Tel: (0232) 625-566  
Telex: 747626  
M

**NORWAY**

Hewlett-Packard Norge A/S  
Folke Bernadottesvei 50  
P.O. Box 3558  
N-5033 **FYLLINGSDALEN (BERGEN)**  
Tel: (05) 16-55-40  
Telex: 16621 hpnas n  
CH,CM,E

Hewlett-Packard Norge A/S

Oesterndalen 18  
P.O. Box 34  
N-1345 **OESTERAAAS**  
Tel: (02) 17-11-80  
Telex: 16621 hpnas n  
A\*,CH,CM,E,MS,P

**OMAN**

*Khimji Ramdas*  
*P.O. Box 19*  
**MUSCAT**  
Tel: 72-22-17, 72-22-25  
Telex: 3289 BROKER MB MUSCAT  
P

**PAKISTAN**

*Mushko & Company Ltd.*  
*10, Bazar Road*  
*Sector G-6/4*  
**ISLAMABAD**  
Tel: 26875  
Cable: *FEMUS Rawalpindi*  
A,E,M  
*Mushko & Company Ltd.*  
*Oosman Chambers*  
*Abdullah Haroon Road*  
**KARACHI 0302**  
Tel: 511027, 512927  
Telex: 2894 MUSKO PK  
Cable: *COOPERATOR Karachi*  
A,E,M,P\*

**PANAMA**

*Electrónico Balboa, S.A.*  
*Calle Samuel Lewis*  
*Aparlado 4929*  
**Panama 5**  
*Edificio "Alfa" No. 2*  
**CIUDAD DE PANAMA**  
Tel: 64-2700  
Telex: 0383 ELECTRON PG  
A,CM,E,M,P

**PANAMA (Con't.)**

Foto Internacional, S.A.  
Free Zone Colon  
Apartado 2068  
COLON 3  
Tel: 45-2333  
Telex: 379 8626, 386 8722  
P

**PERU**

Cla Electro Médica S.A.  
Los Flamencos 145, San Isidro  
Casilla 1030  
LIMA 1  
Tel: 41-4325, 41-3703  
Telex: Pub. Booth 25306  
A,C,M,E,M,P

**PHILIPPINES**

The Online Advanced Systems  
Corporation  
Rico House, Amoroso Cor. Herrera  
Street  
Legaspi Village, Makati  
P.O. Box 1510  
Metro MANILA  
Tel: 85-35-81, 85-34-91, 85-32-21  
Telex: 3274 ONLINE  
A,CH,CS,E,M  
Electronic Specialists and  
Proponents Inc.  
690-B Epifanio de los Santos  
Avenue  
Cubao, QUEZON CITY  
P.O. Box 2649 Manila  
Tel: 98-96-81, 98-96-82, 98-96-83  
Telex: 40018, 42000 ITT GLOBE  
MACKAY BOOTH  
P

**POLAND**

Buro Informasji Technicznej  
Hewlett-Packard  
Ul Stawki 2, 6P  
PL00-950 WARSZAWA  
Tel: 39-59-62, 39-67-43  
Telex: 812453 hepa pl

**PORTUGAL**

SOQUINICA  
Av. da Liberdade 220-2  
P-1298 LISBOA Codex  
Tel: 56 21 81, 56 21 82  
Telex: 13316  
Telectra-Empresa Técnica de  
Equipamentos Eléctricos S.a.r.l.  
Rua Rodrigo da Fonseca 103  
P.O. Box 2531  
P-LISBON 1  
Tel: (19) 68-60-72  
Telex: 12598  
CH,CS,E,P

**Mundinter**

Intercambio Mundial de Comércio  
S.a.r.l.  
P.O. Box 2761  
Avenida Antonio Augusto de Aguiar  
138  
P-LISBON  
Tel: (19) 53-21-31, 53-21-37  
Telex: 16691 munter p  
M

**PUERTO RICO**

Hewlett-Packard Puerto Rico  
P.O. Box 4407  
CAROLINA, Puerto Rico 00630  
Calle 272 Edificio 203  
Urb. Country Club  
RIO PIEDRAS, Puerto Rico 00924  
Tel: (809) 762-7255  
Telex: 345 0514  
A,CH,CS

**QATAR**

Nasser Trading & Contracting  
P.O. Box 1563  
DOHA  
Tel: 22170  
Telex: 4439 NASSER  
M

Computerabia  
P.O. Box 2570  
DOHA

Tel: 329515  
Telex: 4806 CHPARB  
P

**ROMANIA**

Hewlett-Packard Reprezentanta  
Boulevard Nicolae Balcescu 16  
BUCURESTI  
Tel: 130725  
Telex: 10440

**SAUDI ARABIA**

Modern Electronic Establishment  
P.O. Box 193  
AL-KHOBAR  
Tel: 44-678, 44-813  
Telex: 670136  
Cable: ELECTA AL-KHOBAR  
CH,CS,E,M,P

Modern Electronic Establishment  
P.O. Box 1228, Baghdadiah Street  
JEDDAH  
Tel: 27-798  
Telex: 401035  
Cable: ELECTA JEDDAH  
CH,CS,E,M,P

Modern Electronic Establishment  
P.O. Box 2728  
RIYADH  
Tel: 62-596, 66-232  
Telex: 202049  
CH,CS,E,M,P

**SCOTLAND**

Hewlett-Packard Ltd.  
Royal Bank Buildings  
Swan Street  
BRECHIN, Angus, Scotland  
Tel: 3101, 3102  
CH,CM

Hewlett-Packard Ltd.  
SOUTH QUEENSFERRY  
West Lothian, EH30 9GT  
GB-Scotland  
Tel: (031) 3311000  
Telex: 72682  
A,CH,CM,CS,E,M

**SINGAPORE**

Hewlett-Packard Singapore (Pty.)  
Ltd.  
P.O. Box 58 Alexandra Post Office  
SINGAPORE, 9115  
6th Floor, Inchcape House  
450-452 Alexandra Road  
SINGAPORE 0511  
Tel: 631788  
Telex: HPSGSO RS 34209  
Cable: HEWPACK, Singapore  
A,CH,CS,E,MS,P

**SOUTH AFRICA**

Hewlett-Packard South Africa (Pty.)  
Ltd.  
P.O. Box 120  
Howard Place  
Pine Park Center, Forest Drive,  
Pinelands  
CAPE PROVINCE 7450  
Tel: 53-7955, 53-7956, 53-7957  
Telex: 57-0006  
A,CH,CM,E,MS,P

Hewlett-Packard South Africa (Pty.)  
Ltd.  
P.O. Box 37099  
Overport  
DURBAN 4067  
Tel: 28-4178, 28-4179, 28-4110  
CH,CM

Hewlett-Packard South Africa (Pty.)  
Ltd.  
P.O. Box 33345  
Glenstantia 0010 TRANSVAAL  
1st Floor East  
Constantia Park Ridge Shopping  
Centre  
Constantia Park  
PRETORIA  
Tel: 01298-1126  
Telex: 32163  
CH,E

Hewlett-Packard South Africa (Pty.)  
Ltd.  
Private Bag Wendywood  
SANDTON 2144  
Tel: 802-5111, 802-5125  
Telex: 89-84782  
Cable: HEWPACK Johannesburg  
A,CH,CM,CS,E,MS,P

**SPAIN**

Hewlett-Packard Española S.A.  
c/Entenza, 321  
E-BARCELONA 29  
Tel: (3) 322-24-51, 321-73-54  
Telex: 52603 hpbee  
A,CH,CM,CS,E,MS,P

Hewlett-Packard Española S.A.  
c/San Vicente S/N  
Edificio Albia II, 7 B  
E-BILBAO 1  
Tel: (944) 423-8306, 423-8206  
A,CH,CM,E,MS  
Hewlett-Packard Española S.A.  
Calle Jerez 3  
E-MADRID 16  
Tel: 458-2600  
Telex: 23515 hpe  
A,CM,E

Hewlett-Packard Española S.A.  
c/o Costa Brava 13  
Colonia Mirasierra  
E-MADRID 34  
Tel: 734-8061, 734-1162  
CH,CS,M

Hewlett-Packard Española S.A.  
Av Ramón y Cajal 1-9  
Edificio Sevilla 1,  
E-SEVILLA 5  
Tel: 64-44-54, 64-44-58  
Telex: 72933  
A,CM,CS,MS,P  
Hewlett-Packard Española S.A.  
C/Ramon Gordo, 1 (Entlo.3)  
E-VALENCIA 10  
Tel: 361-1354, 361-1358  
CH,CM,P

**SWEDEN**

Hewlett-Packard Sverige AB  
Enighetsvägen 3, Fack  
P.O. Box 20502  
S-16120 BROMMA  
Tel: (08) 730-0550  
Telex: (854) 10721 MESSAGES  
Cable: MEASUREMENTS  
STOCKHOLM  
A,CH,CM,CS,E,MS,P

Hewlett-Packard Sverige AB  
Sunnanvagen 14K  
S-22226 LUND  
Tel: (46) 13-69-79  
Telex: (854) 10721 (via BROMMA  
office)  
CH,CM

Hewlett-Packard Sverige AB  
Vastra Vintergatan 9  
S-70344 OREBRO  
Tel: (19) 10-48-80  
Telex: (854) 10721 (via BROMMA  
office)  
CH,CM

Hewlett-Packard Sverige AB  
Frötailisgatan 30  
S-42132 VÄSTRA-FRÖLUNDA  
Tel: (031) 49-09-50  
Telex: (854) 10721 (via BROMMA  
office)  
CH,CM,E,P

**SWITZERLAND**

Hewlett-Packard (Schweiz) AG  
Clarastrasse 12  
CH-4058 BASLE  
Tel: (61) 33-59-20  
A,CM

Hewlett-Packard (Schweiz) AG  
Bahnhofstrasse 44  
3018 BERN  
Tel: (031) 56-24-22  
CH,CM

Hewlett-Packard (Schweiz) AG  
47 Avenue Blanc  
CH-1202 GENEVA  
Tel: (022) 32-30-05, 32-48-00  
CH,CM,CS

Hewlett-Packard (Schweiz) AG  
29 Chemin Châteaue Bloc  
CH-1219 LE LIGNON-Geneva  
Tel: (022) 96-03-22  
Telex: 27333 hpag ch  
Cable: HEWPACKAG Geneva  
A,CM,E,MS,P

Hewlett-Packard (Schweiz) AG  
Zürcherstrasse 20  
Allmend 2  
CH-8967 WIDEN  
Tel: (57) 50-111  
Telex: 59933 hpag ch  
Cable: HPAG CH  
A,CH,CM,CS,E,MS,P

**SYRIA**

General Electronic Inc.  
Nuri Basha-Ahmal Ebn Kays Street  
P.O. Box 5781

**DAMASCUS**

Tel: 33-24-87  
Telex: 11215 ITIKAL  
Cable: ELECTROBOR DAMASCUS  
E

**Middle East Electronics**

Place Azmé  
Boite Postale 2308  
DAMASCUS  
Tel: 334592  
Telex: 11304 SATACO SY  
M,P

**TAIWAN**

Hewlett-Packard Far East Ltd.  
Kaohsiung Office  
2/F 68-2, Chung Cheng 3rd Road  
KAOHSIUNG  
Tel: 241-2318, 261-3253  
E,MS,P

Hewlett-Packard Far East Ltd.  
Taichung Office  
#33, Cheng Tr Rd.  
10th Floor, Room 5  
TAICHUNG  
Tel: (042) 289274

Hewlett-Packard Far East Ltd.  
Taiwan Office  
5th Floor  
205 Tun Hwa North Road  
TAIPEI  
Tel: (02) 751-0404  
Cable: HEWPACK Taipei  
A,CH,CS,E,MS,P  
Ing Lih Trading Co.  
3rd Floor 18, Po-Ai Road  
TAIPEI (100)  
Tel: (02) 311-1914  
Cable: INGLIH TAIPEI  
A

**THAILAND**

Unimesa  
30 Patpong Ave., Suriwong  
BANGKOK 5  
Tel: (234-091) (234-092)  
Telex: TH 81160, TH 81038  
Cable: UNIMESA Bangkok  
A,C,E,M  
Bangkok Business Equipment Ltd.  
5/5-6 Dejo Road  
BANGKOK  
Tel: 234-8670, 234-8671  
Telex: 87669-BEQUIPT TH  
Cable: BUSIQUIPT Bangkok  
P

**TRINIDAD & TOBAGO**

Caribbean Telecoms Ltd.  
50/A Jerningham Avenue  
P.O. Box 732  
PORT-OF-SPAIN  
Tel: 624-4213, 624-4214  
Telex: 3235, 3272 HUGCO WG  
A,CM,E,M,P

**TUNISIA**

Tunisie Electronique  
31 Avenue de la Liberté  
TUNIS  
Tel: 280-144  
E,P

Corema  
1 ter. Av. de Carthage

TUNIS  
Tel: 253-821  
Telex: 12319 CABAM TN  
M

**TURKEY**

Teknim Company Ltd.  
Iran Caddesi No. 7  
Kavaklidere, ANKARA  
Tel: 275800  
Telex: 42155  
E

E.M.A.  
Medina Eldem Sokak No.4/16  
Yuksel Caddesi  
ANKARA  
Tel: 175 622  
M,P

**UNITED ARAB EMIRATES**

Emilac Ltd.  
P.O. Box 1641  
SHARJAH  
Tel: 354121, 354123  
Telex: 68136 Emilac SL  
CH,CS,E,M,P

**UNITED KINGDOM**  
**see: GREAT BRITAIN**  
**NORTHERN IRELAND**  
**SCOTLAND**

**UNITED STATES**

**Alabama**

Hewlett-Packard Co.  
700 Century Park South  
Suite 128  
BIRMINGHAM, AL 35226  
Tel: (205) 822-6802  
CH,CM,MP

Hewlett-Packard Co.  
P.O. Box 4207  
8290 Whitesburg Drive, S.E.  
HUNTSVILLE, AL 35802  
Tel: (205) 881-4591  
CH,CM,CS,E,M\*

**Alaska**

Hewlett-Packard Co.  
1577 "C" Street, Suite 252  
ANCHORAGE, AK 99510  
Tel: (206) 454-3971  
CH\*,CM

**Arizona**

Hewlett-Packard Co.  
2336 East Magnolia Street  
PHOENIX, AZ 85034  
Tel: (602) 273-8000  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
2424 East Aragon Road  
TUCSON, AZ 85702  
Tel: (602) 889-4631  
CH,CM,E,MS\*\*

**Arkansas**

Hewlett-Packard Co.  
P.O. Box 5646  
Brady Station  
LITTLE ROCK, AR 72215  
Tel: (501) 376-1844, (501) 664-8773  
CM,MS

**California**

Hewlett-Packard Co.  
99 South Hill Dr.  
BRISBANE, CA 94005  
Tel: (415) 330-2500  
CH,CM,CS

Hewlett-Packard Co.  
7621 Canoga Avenue  
CANOGA PARK, CA 91304  
Tel: (213) 702-8300  
A,CH,CM,CS,E,P

Hewlett-Packard Co.  
1579 W. Shaw Avenue  
FRESNO, CA 93771  
Tel: (209) 224-0582  
CM,MS

Hewlett-Packard Co.  
1430 East Orangethorpe  
FULLERTON, CA 92631  
Tel: (714) 870-1000  
CH,CM,CS,E,MP

Hewlett-Packard Co.  
5400 W. Rosecrans Boulevard  
LAWDALE, CA 90260  
P.O. Box 92105  
LOS ANGELES, CA 90009  
Tel: (213) 970-7500  
CH,CM,CS,MP

Hewlett-Packard Co.  
3939 Lankershim Blvd.  
NORTH HOLLYWOOD, CA 91604  
Tel: (213) 877-1282  
Regional Headquarters

Hewlett-Packard Co.  
3200 Hillview Avenue  
PALO ALTO, CA 94304  
Tel: (415) 857-8000  
CH,CM,CS,E

Hewlett-Packard Co.  
646 W. North Market Boulevard  
SACRAMENTO, CA 95834  
Tel: (916) 929-7222  
A\*,CH,CM,CS,E,MS

Hewlett-Packard Co.  
9606 Aero Drive  
P.O. Box 23333 SAN DIEGO, CA 92123  
Tel: (714) 279-3200  
CH,CM,CS,E,MP

Hewlett-Packard Co.  
Suite A  
5553 Hollister  
SANTA BARBARA, CA 93111  
Tel: (805) 964-3390

Hewlett-Packard Co.  
3003 Scott Boulevard  
SANTA CLARA, CA 95050  
Tel: (408) 988-7000  
A,CH,CM,CS,E,MP

**Colorado**

Hewlett-Packard Co.  
24 Inverness Place, East  
ENGLEWOOD, CO 80112  
Tel: (303) 771-3455  
A,CH,CM,CS,E,MS

**Connecticut**

Hewlett-Packard Co.  
47 Barnes Industrial Road South  
P.O. Box 5007  
WALLINGFORD, CT 06492  
Tel: (203) 265-7801  
A,CH,CM,CS,E,MS

**Florida**

Hewlett-Packard Co.  
P.O. Box 24210  
2727 N.W. 62nd Street  
FORT LAUDERDALE, FL 33309  
Tel: (305) 973-2600  
CH,CM,CS,E,MP

Hewlett-Packard Co.  
4080 Woodcock Drive, #132  
Brownell Building  
JACKSONVILLE, FL 32207  
Tel: (904) 398-0663  
CM,C\*,E\*,MS\*\*

Hewlett-Packard Co.  
P.O. Box 13910  
6177 Lake Ellenor Drive  
ORLANDO, FL 32809  
Tel: (305) 859-2900  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
6425 N. Pensacola Blvd.  
Suite 4, Building 1  
PENSACOLA, FL 32575  
Tel: (904) 476-8422  
A,CM,MS

Hewlett-Packard Co.  
110 South Hoover, Suite 120  
Vanguard Bldg.  
TAMPA, FL 33609  
Tel: (813) 872-0900  
A\*,CH,CM,CS,E\*,M\*

**Georgia**

Hewlett-Packard Co.  
P.O. Box 105005  
2000 South Park Place  
ATLANTA, GA 30339  
Tel: (404) 955-1500  
Telex: 810-766-4890  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
Executive Park Suite 306  
P.O. Box 816  
AUGUSTA, GA 30907  
Tel: (404) 736-0592  
CM,MS

Hewlett-Packard Co.  
P.O. Box 2103  
1172 N. Davis Drive  
WARNER ROBINS, GA 31098  
Tel: (912) 923-8831  
CM,E

**Hawaii**

Hewlett-Packard Co.  
Kawaiahao Plaza, Suite 190  
567 South King Street  
HONOLULU, HI 96813  
Tel: (808) 526-1555  
A,CH,CM,E,MS

**Idaho**

Hewlett-Packard Co.  
11311 Chinden Boulevard  
BOISE, ID 83707  
Tel: (208) 376-6000  
CH,CM,M\*

**Illinois**

Hewlett-Packard Co.  
211 Prospect Road  
BLOOMINGTON, IL 61701  
Tel: (309) 663-0383  
CH,CM,MS\*\*

Hewlett-Packard Co.  
1100 31st Street  
DOWNERS GROVE, IL 60515  
Tel: (312) 960-5760  
CH,CM,CS

Hewlett-Packard Co.  
5201 Tollview Drive  
ROLLING MEADOWS, IL 60008  
Tel: (312) 255-9800  
A,CH,CM,CS,E,MP

**Indiana**

Hewlett-Packard Co.  
P.O. Box 50807  
7301 No. Shadeland Avenue  
INDIANAPOLIS, IN 46250  
Tel: (317) 842-1000  
A,CH,CM,CS,E,MS

**Iowa**

Hewlett-Packard Co.  
5815 S.W. 5th Street  
DES MOINES, IA 50315  
Tel: (515) 243-5876  
CH,CM,MS\*\*

Hewlett-Packard Co.  
2415 Heinz Road  
IOWA CITY, IA 52240  
Tel: (319) 351-1020  
CH,CM,E\*,MS

**Kansas**

Hewlett-Packard Co.  
1644 S. Rock  
WICHITA, KA 67207  
Tel: (316) 265-5200  
CH,CM

**Kentucky**

Hewlett-Packard Co.  
10170 Linn Station Road  
Suite 525  
LOUISVILLE, KY 40223  
Tel: (502) 426-0100  
A,CH,CM,CS,MS

**Louisiana**

Hewlett-Packard Co.  
P.O. Box 1449  
3229 Williams Boulevard  
KENNER, LA 70062  
Tel: (504) 443-6201  
A,CH,CM,CS,E,MS

**Maryland**

Hewlett-Packard Co.  
7121 Standard Drive  
HANOVER, MD 21076  
Tel: (301) 796-7700  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
2 Choke Cherry Road  
ROCKVILLE, MD 20850  
Tel: (301) 948-6370  
Telex: 710-828-9685  
A,CH,CM,CS,E,MP

**Massachusetts**

Hewlett-Packard Co.  
32 Hartwell Avenue  
LEXINGTON, MA 02173  
Tel: (617) 861-8960  
A,CH,CM,CS,E,MP

**Michigan**

Hewlett-Packard Co.  
23855 Research Drive  
FARMINGTON HILLS, MI 48024  
Tel: (313) 476-6400  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
4326 Cascade Road S.E.  
GRAND RAPIDS, MI 49506  
Tel: (616) 957-1970  
CH,CM,CS,MS

**Minnesota**

Hewlett-Packard Co.  
2025 W. Larpenteur Ave.  
ST. PAUL, MN 55113  
Tel: (612) 644-1100  
A,CH,CM,CS,E,MP

**Mississippi**

Hewlett-Packard Co.  
P.O. Box 5028  
322 N. Mart Plaza  
JACKSON, MS 39216  
Tel: (601) 982-9363  
CM,MS

Hewlett-Packard Co.  
322 N. Mart Plaza  
JACKSON, MS 39216  
Tel: (601) 982-9363  
CM,MS

**Missouri**

Hewlett-Packard Co.  
11131 Colorado Avenue  
KANSAS CITY, MO 64137  
Tel: (816) 763-8000  
Telex: 910-771-2087  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
1024 Executive Parkway  
ST. LOUIS, MO 63141  
Tel: (314) 878-0200  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
1024 Executive Parkway  
ST. LOUIS, MO 63141  
Tel: (314) 878-0200  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
1024 Executive Parkway  
ST. LOUIS, MO 63141  
Tel: (314) 878-0200  
A,CH,CM,CS,E,MP

**Nebraska**

Hewlett-Packard  
7101 Mercy Road  
Suite 101, IBX Building  
OMAHA, NE 68106  
Tel: (402) 392-0948  
CM,MS

**Nevada**

Hewlett-Packard Co.  
Suite D-130  
5030 Paradise Blvd.  
LAS VEGAS, NV 89119  
Tel: (702) 736-6610  
CM,MS\*\*

**New Jersey**

Hewlett-Packard Co.  
Crystal Brook Professional Building  
Route 35  
EATONTOWN, NJ 07724  
Tel: (201) 542-1384  
A\*,CM,C\*,E\*,P\*

Hewlett-Packard Co.  
W120 Century Road  
PARAMUS, NJ 07652  
Tel: (201) 265-5000  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
60 New England Ave. West  
PISCATAWAY, NJ 08854  
Tel: (201) 981-1199  
A,CH,CM,CS,E

**New Mexico**

Hewlett-Packard Co.  
P.O. Box 11634  
11300 Lomas Blvd., N.E.  
ALBUQUERQUE, NM 87123  
Tel: (505) 292-1330  
Telex: 910-989-1185  
CH,CM,CS,E,MS

**New York**

Hewlett-Packard Co.  
5 Computer Drive South  
ALBANY, NY 12205  
Tel: (518) 458-1550  
Telex: 710-444-4691  
A,CH,CM,E,MS

Hewlett-Packard Co.  
9600 Main Street  
CLARENCE, NY 14031  
Tel: (716) 759-8621  
Telex: 710-523-1893  
CH

Hewlett-Packard Co.  
200 Cross Keys Office  
FAIRPORT, NY 14450  
Tel: (716) 223-9950  
Telex: 510-253-0092  
CH,CM,CS,E,MS

Hewlett-Packard Co.  
No. 1 Pennsylvania Plaza  
55th Floor  
34th Street & 8th Avenue  
NEW YORK, NY 10119  
Tel: (212) 971-0800  
CH,CM,CS,E\*,M\*

Hewlett-Packard Co.  
5858 East Molloy Road  
SYRACUSE NY 13211  
Tel: (315) 455-2486  
A,CH,CM,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
3 Crossways Park West  
WOODBURY, NY 11797  
Tel: (516) 921-0300  
Telex: 510-221-2183  
A,CH,CM,CS,E,MS

**Ohio (Con't)**

Hewlett-Packard Co.  
330 Progress Rd.  
DAYTON, OH 45449  
Tel: (513) 859-8202  
A,CH,CM,E\*,MS

**Oklahoma**

Hewlett-Packard Co.  
P.O. Box 366  
1503 W. Gore Blvd., Suite #2  
LAWTON, OK 73502  
Tel: (405) 248-4248  
C

Hewlett-Packard Co.  
P.O. Box 32008  
304 N. Meridan Avenue, Suite A  
OKLAHOMA CITY, OK 73107  
Tel: (405) 946-9499

A\*,CH,CM,E\*,MS

Hewlett-Packard Co.  
Suite 121  
9920 E. 42nd Street  
TULSA, OK 74145  
Tel: (918) 665-3300  
A\*\*,CH,CM,CS,M\*

**Oregon**

Hewlett-Packard Co.  
1500 Valley River Drive, Suite 330  
EUGENE, OR 97401  
Tel: (503) 683-8075  
C

Hewlett-Packard Co.  
9255 S. W. Pioneer Court  
WILSONVILLE, OR 97070  
Tel: (503) 682-8000  
A,CH,CM,CS,E\*,MS

**Pennsylvania**

Hewlett-Packard Co.  
1021 8th Avenue  
King of Prussia Industrial Park  
KING OF PRUSSIA, PA 19406  
Tel: (215) 265-7000

Telex: 510-660-2670

A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
111 Zeta Drive

PITTSBURGH, PA 15238

Tel: (412) 782-0400

A,CH,CM,CS,E,MP

**South Carolina**

Hewlett-Packard Co.  
P.O. Box 6442  
694 1-0 N. Trenholm Road  
COLUMBIA, SC 29260  
Tel: (803) 782-6493  
CH,CM,E,MS

Hewlett-Packard Co.  
814 Wade Hampton Blvd.

Suite 10

GREENVILLE, SC 29609

Tel: (803) 232-0917  
C

**Tennessee**

Hewlett-Packard Co.  
P.O. Box 22490  
224 Peters Road  
Suite 102

KNOXVILLE, TN 37922  
Tel: (615) 691-2371

A\*,CH,CM,MS

Hewlett-Packard Co.  
3070 Directors Row

MEMPHIS, TN 38131

Tel: (901) 346-8370

A,CH,CM,MS

Hewlett-Packard Co.  
Suite 103

478 Craighead Street

NASHVILLE, TN 37204

Tel: (615) 383-9136

CM,MS\*\*

**Texas**

Hewlett-Packard Co.  
Suite 310W  
7800 Shoal creek Blvd.  
AUSTIN, TX 78757  
Tel: (512) 459-3143  
CM,E

Hewlett-Packard Co.  
Suite C-110  
4171 North Mesa  
EL PASO, TX 79902  
Tel: (915) 533-3555  
CH,CM,E\*,MS\*\*

Hewlett-Packard Co.  
5020 Mark IV Parkway  
FORT WORTH, TX 76106  
Tel: (817) 625-6361  
CM,C\*

Hewlett-Packard Co.  
P.O. Box 42816  
10535 Harwin Street  
HOUSTON, TX 77036  
Tel: (713) 776-6400  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
3309 67th Street  
Suite 24

LUBBOCK, TX 79413

Tel: (806) 799-4472

M

Hewlett-Packard Co.  
P.O. Box 1270  
930 E. Campbell Rd.  
RICHARDSON, TX 75081  
Tel: (214) 231-6101  
A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
205 Billy Mitchell Road  
SAN ANTONIO, TX 78226  
Tel: (512) 434-8241  
CH,CM,CS,E,MS

**Utah**

Hewlett-Packard Co.  
3530 W. 2100 South Street  
SALT LAKE CITY, UT 84119  
Tel: (801) 974-1700

A,CH,CM,CS,E,MS

**Virginia**

Hewlett-Packard Co.  
P.O. Box 9669

2914 Hungary Spring Road

RICHMOND, VA 23228

Tel: (804) 285-3431

A,CH,CM,CS,E,MS

Hewlett-Packard Co.  
P.O. Box 4786

3110 Peters Creek Road, N.W.

ROANOKE, VA 24015

Tel: (703) 563-2205

CH,CM,E\*\*

Hewlett-Packard Co.  
P.O. Box 12778

5700 Thurston Avenue

Suite 111

VIRGINIA BEACH, VA 23455

Tel: (804) 460-2471

CH,CM,MS

**Washington**

Hewlett-Packard Co.  
15815 S.E. 37th Street

BELLEVUE, WA 98006

Tel: (206) 643-4000

A,CH,CM,CS,E,MP

Hewlett-Packard Co.  
Suite A

708 North Argonne Road

SPOKANE, WA 99206

Tel: (509) 922-7000

CH,CM,CS

**West Virginia**

Hewlett-Packard Co.  
4604 MacCorkle Ave., S.E.  
CHARLESTON, WV 25304  
Tel: (304) 925-0492  
A,CM,MS

**Wisconsin**

Hewlett-Packard Co.  
150 S. Sunny Slope Road  
BROOKFIELD, WI 53005  
Tel: (414) 784-8800  
A,CH,CM,CS,E\*,MP

**URUGUAY**

*Pablo Ferrando S.A.C. e.l.*  
Avenida Italia 2877  
Casilla de Correo 370

**MONTEVIDEO**

Tel: 80-2586

Telex: Public Booth 901

A,CM,E,M

*Guillermo Kraft del Uruguay S.A.*

Av. Lib. Brig. Gral. Lavalleja 2083

**MONTEVIDEO**

Tel: 234588, 234808, 208830

Telex: 6245 ACTOUR UY

P

**U.S.S.R.**

Hewlett-Packard Co.  
Representative Office  
Pokrovsky Blvd. 4/17 KV12  
MOSCOW 101000 Tel: 294-2024  
Telex: 7825 HEWPAK SU

**VENEZUELA**

Hewlett-Packard de Venezuela C.A.  
Apartado 50933  
3A Transversal Los Ruices Norte  
Edificio Segre  
CARACAS 1071  
Tel: 239-4133  
Telex: 25146 HEWPAK  
A,CH,CS,E,MS,P

**YUGOSLAVIA**

*Iskra-Commerce-Representation of Hewlett-Packard*  
Sava Cenlar Delegacija 30  
Milentija Popovica 9  
11170 BEOGRAD  
Tel: 638-762  
Telex: 12042, 12322 YU SAV CEN

*Iskra-Commerce-Representation of Hewlett-Packard*  
Kopraska 46  
61000 LJUBLJANA  
Tel: 321674, 315879

Telex:

**ZAIRE**

*Computer & Industrial Engineering*  
25 Avenue de la Justice  
B.P. 10-976  
Kinshasa I/Zaire

**GOMBE**

Tel: 32063

Telex: 21-457 SGEKIN ZR

CH,CS

**ZIMBABWE**

*Field Technical Sales*  
45 Kelvin Road, North  
P.B. 3458  
SALISBURY

Tel: 705 231

Telex: 4-122 RH

C,E,M,P

**FOR COUNTRIES AND AREAS NOT LISTED:****CANADA****Ontario**

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
MISSISSAUGA, Ontario L4V 1M8  
Tel: (416) 678-9430  
Telex: 610-492-4246

**EASTERN USA****Maryland**

Hewlett-Packard Co.  
4 Choke Cherry Road  
Rockville, MD 20850  
Tel: (301) 258-2000

**MIDWESTERN USA****Illinois**

Hewlett-Packard Co.  
5201 Tollview Drive  
ROLLING MEADOWS, IL 60008  
Tel: (312) 255-9800

**SOUTHERN USA****Georgia**

Hewlett-Packard Co.  
P.O. Box 105005  
450 Interstate N. Parkway  
ATLANTA, GA 30339  
Tel: (404) 955-1500

**WESTERN USA****California**

Hewlett-Packard Co.  
3939 Lankersim Blvd.  
LOS ANGELES, CA 91604  
Tel: (213) 877-1282

**EUROPEAN AREAS NOT LISTED, CONTACT****SWITZERLAND**

Hewlett-Packard S.A.  
7 Rue du Bois-du-Lan  
CH-1217 MEYRIN 2, Switzerland  
Tel: (022) 83-81-11  
Telex: 27835 hpse  
Cable: HEWPAKSA Geneve

**EAST EUROPEAN AREAS NOT LISTED, CONTACT****AUSTRIA**

Hewlett-Packard Ges.m.b.h.  
Wehlstrasse 29  
P.O. Box 7  
A-1205 VIENNA  
Tel: (222) 35-16-210  
Telex: 135823/135066

**MEDITERRANEAN AND MIDDLE EAST AREAS NOT LISTED, CONTACT****GREECE**

Hewlett-Packard S.A.  
Mediterranean & Middle East  
Operations  
32 Kifissias Ave.  
Atrina Center  
PARADISOS, Amaroussion  
Tel: 808-1741-4  
Telex: 21-6588 HPAT GR  
Cable: HEWPAKSA Athens

**INTERNATIONAL AREAS NOT LISTED, CONTACT****OTHER AREAS**

Hewlett-Packard Co.  
Intercontinental Headquarters  
3495 Deer Creek Road  
PALO ALTO, CA 94304  
Tel: (415) 857-1501  
Telex: 034-8300  
Cable: HEWPAK

**FOR COUNTRIES AND AREAS NOT LISTED, CONTACT:****AFRICA****NORTHERN AND CENTRAL AFRICA****SWITZERLAND**

Hewlett-Packard S.A.  
7 Rue du Bois-du-Lan  
CH-1217 MEYRIN 2, Switzerland  
Tel: (022) 98-96-51  
Telex: 27835 hpse  
Cable: HEWPAKSA Geneve

**ASIA****HONG KONG**

Hewlett-Packard Asia Ltd.  
6th Floor, Sun Hung Kai Center  
30 Harbor Rd.  
G.P.O. Box 795  
HONG KONG  
Tel: 5-832 3211  
Telex: 66678 HEWPA HX  
Cable: HP ASIA LTD Hong Kong

**EUROPE****EASTERN EUROPE****AUSTRIA**

Hewlett-Packard Ges.m.b.h.  
Wehlstrasse 29  
P.O.Box 7  
A-1205 VIENNA  
Tel: (222) 35-16-210  
Telex: 135823/135066

**NORTHERN EUROPE****THE NETHERLANDS**

Hewlett-Packard S.A.  
Uilenstede 475  
NL-1183 AG AMSTELVEEN, The Netherlands  
P.O.Box 999  
NL-1180 AZ AMSTELVEEN, The Netherlands  
Tel: 20 437771

**SOUTH EASTERN EUROPE****SWITZERLAND**

Hewlett-Packard S.A.  
7 Rue du Bois-du-Lan  
CH-1217 MEYRIN 2, Switzerland  
Tel: (022) 98-96-51  
Telex: 27835 hpse  
Cable: HEWPAKSA Geneve  
(Offices in the World Trade Center)

**MEDITERRANEAN AND MIDDLE EAST****GREECE**

Hewlett-Packard S.A.  
Mediterranean and Middle East  
Operations  
Atrina Centre  
32 Kifissias Ave.  
Amaroussion, ATHENS, Greece  
Tel: 808-0359 808-0429  
Telex: 21-6588  
Cable: HEWPAKSA Athens

**OTHER INTERNATIONAL AREAS**

Hewlett-Packard Co.  
Intercontinental Headquarters  
3495 Deer Creek Road  
PALO ALTO, CA 94304  
Tel: (415) 857-1501  
Telex: 034-8300  
Cable: HEWPAK  
August 1981 5952-6900



